

User Manual

Three Phase Active and Reactive Energy Smart Meter

Model No.: IQ0304100b1

KWHIQ b.v.

Safety Instructions

⚠ WARNING

Read all safety information and operating instructions before using the meter to avoid personal injury.

Local safety regulations must be observed.

Transport and Storage

Refer to clause 14 “Transport and storage”.

Installation

Power must be cut off before installation or removal of the meter. Refer to clause 13“Meter Installation” for more details.

The installation has to be executed by competent and qualified personnel only, in accordance with the national regulations.

Operation

Do not break the seal and remove terminal cover without authorization.

Do not break the seal and remove communicate module without authorization.

Never remove the meter cover while the meter is in operation. The exposed circuits and components may lead to injuries or damage to the meter.

Meter working voltage should be less than 120% nominal voltage (120%Un), load current should be less than 120% maximum current (120% Imax). Long time over voltage and over load may lead to damage the meter.

Do not operate the meter with wet hands.

All Rights Reserved

No part of this document can be reproduced or transmitted in any form or by any means without prior written consent of KWHIQ B.V. Burgemeester Burgerslaan 40 5245 NH Rosmalen. The Netherlands.

Notice

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents but all statements, information and recommendations in this document do not constitute the warranty of any kind, expressed or implied.

KWHIQ CONFIDENTIAL

For service and technical support information, please contact:

KWHIQ b.v.

Burgemeester Burgerslaan 40. 5245 NH Rosmalen, The Netherlands

Phone: +31 73 544 3071

Website: https://kwhiq.com/

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Amendment

Version	Date	Remark
V1.0	2022-01	IQ0304100b1 Smart meter User manual

KHWIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Content

Safety Instructions *2*

Amendment 3

Content *4*

1. Overview *6*

1.1 Abbreviation 6

1.2 Reference 7

2. General Description *9*

2.1 Front View and Rear View 9

2.2 Measurement System 10

2.3 Features List 10

2.4 Function Characteristics 11

3. Meter Construction *12*

3.1 Enclosure 12

3.2 Marking of the Meter 12

3.3 Sealing of Meter 13

3.4 Push Button 14

4 Display Control *15*

4.1 Display Introduction 15

4.2 Basic Layout 15

4.3 Display operating modes 16

4.4 Display Mode and Menu 18

5 Alarm and Event Handling *20*

5.1 Alarm and Error 20

5.2 Alarm and Error Registers 20

5.3 Event log profile 22

5.4 Event codes list 22

6. Real Time Clock *23*

7. Tariff Management *24*

8. Load Profiles *25*

8.1 Load Profile Characteristics 25

8.2 Load Profile Status Word 25

8.3 Load Profile List 25

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

8.4 Load Profile Event Handling 26

9. Power Quality 27

9.1 Instantaneous Power values 27

9.2 Sag and Swell detection 28

9.3 Power Quality profile 28

10. Firmware Update 30

11. Communication Interfaces and Communication 30

11.1 Optical Port Communication 31

11.2 WAN Profile 31

11.3 P2P Functionality Description 32

11.4 Communication to IHD 32

11.5 RS-485 32

12. Security 33

12.1 Physical Security 33

12.2 Communication Security 33

12.3 Clients 34

13. Meter Installation 35

13.1 Meter Dimension 35

13.2 Wiring Diagram 35

13.3 Requirements on Wires 36

13.4 Tools for Installation 36

13.5 Installation Steps 37

13.6 Communication module installation as illustrated below 38

13.7 External antenna installation as illustrated below 39

14. Transport and Storage 40

Annexure II Default Tariff Table 44

KHWIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

1. Overview

This document is the guideline for users to install, operate and maintain the IQ0304100B1 three phase smart meter with direct connection.

The IQ0304100B1 three phase meter is designed for measuring and monitoring energy parameters, such as total active/reactive energy in both directions, instantaneous voltage and current, Power Factor, Vrms, Irms, active and reactive power in a three-phase four-wire network. It provides a P1 Port to push data to customer device. It provides P0 port for Local configuration and maintenance through infrared communication. The remote communication module is modular designed with its own box and embedded into the meter box. This makes it flexible to support different type of communication modules. There is segment LCD display and push-button for user to read metering information on site.

1.1 Abbreviation

A	Active energy
+A	Active energy import
-A	Active energy export
+R	Reactive energy import
-R	Reactive energy export
R1	Reactive energy QI
R2	Reactive energy QII
R3	Reactive energy QIII
R4	Reactive energy QIV
	Active power
+P	Active power import
-P	Active power export
	Reactive power
+Q	Reactive power import
-Q	Reactive power export
MD	Maximum Demand
PF	Power Factor
TOU	Time Of Use
RTC	Real Time Clock
HES	Head End System
IHD	In Home Display
HHU	Hand Held Unit
AA	Application Association
AARE	Application Association Response
AARQ	Application Association Request
ACSE	Association Control Service Element
APDU	Application Protocol Data Unit
ASE	Application Service Element

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

HDLC	High-level Data Link Control
HLS	COSEM High Level Security
IC	COSEM Interface Class
KEK	Key Encrypting Key
LAN	Local Area Network
MAC	Medium Access Control
PLC	Power line carrier
PKI	Public Key Infrastructure
WZ	Service Interface
H1	Consumer Interface
M2	Multi Utility Interface

1.2 Reference

The meter complies with the following standards.

No.	Standard No.	Title
1	IEC 62052-11	AC electricity meters – General Requirements, Tests and Test Conditions, Part 11: Metering devices
2	IEC 62053-21	AC electricity meters; Special Requirements, Part 21: Electronic active-power meters of Accuracy Classes 1 and 2
3	IEC 62053-23	AC electricity meters – Special Requirements - Part 23: Electronic reactive power consumption meters of Accuracy Classes 2 and 3
4	IEC 62053-52	AC electricity meters - Special Requirements - Part 52: Symbols
5	IEC 62054-21	AC electricity meters - tariff and load control - Part 21: special requirements for time switches
6	IEC 62056-21	Electricity meters, meter reading transmission, Part 21: data transmission for fixed and mobile connections
7	IEC 62056-53	Electricity meters, Data exchange for meter reading, tariff and local control, Part 53: COSEM application layer
8	IEC 62056-61	Measuring electrical energy – meter reading transmission, Part 61: OBIS Object Identification System
9	IEC 62056-62	Measuring electrical energy - meter reading transmission, tariff and load control - Part 62: Interface Classes
10	IEC 60695-2-11	Tests for assessing the fire hazard - Part 2-11: Tests with the glow-wire; tests with the glow-wire on the ignitability of end-products
11	IEC 60529	Degrees of protection through housing (IP code)
12	IEC 60068-2-75	Environmental tests - Part 2: Tests; Test Eh: Hammer Tests

KHWIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ


13	EN 50470-1	AC electricity meters – Part 1: General Requirements, Tests and Test Conditions– Metering Devices (Accuracy Classes A, B and C)
14	EN 50470-3	AC electricity meters - Part 3: Special requirements – Electronic active power consumption meters of Accuracy Classes A, B and C
15	DIN 43855	Electricity meters, signs
16	DIN 43856	Electricity meters, multi-rate tariff switches and ripple control receivers; circuit numbers, terminal designations, schematics
17	DIN 43857-2	Electricity meters in insulating-material housings, for direct connection, up to 60 A limit current; principal dimensions for three-phase-current meters

KHWIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

2. General Description

2.1 Front View and Rear View

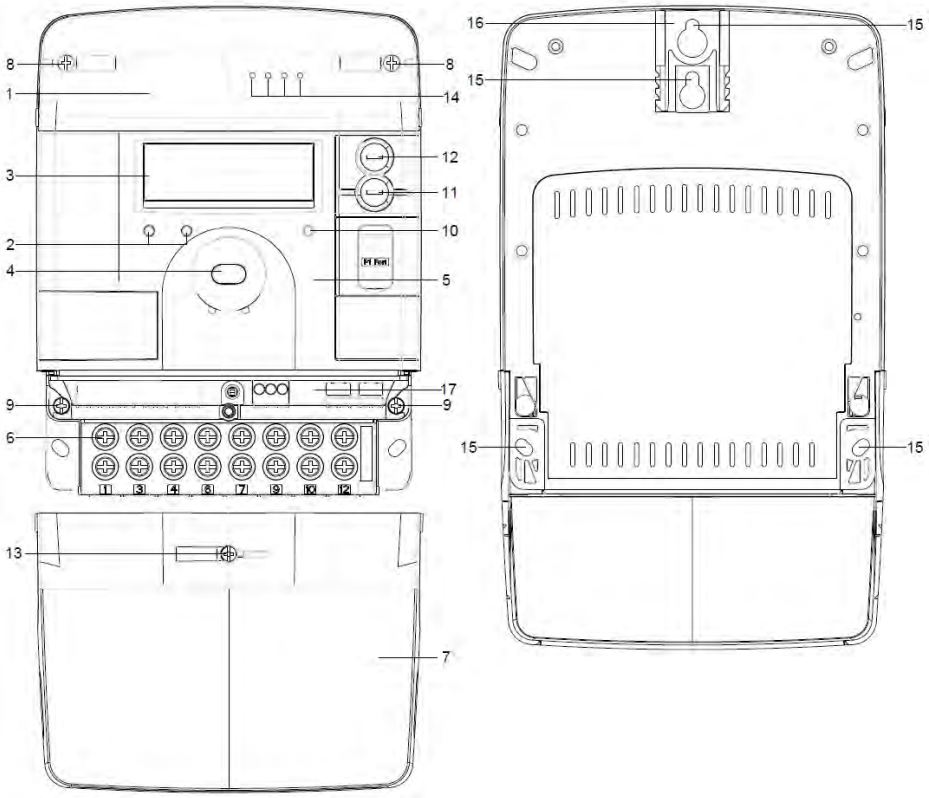

(1) Communication module
(2) Active and reactive power impulse LED
(3) LCD
(4) Optical port
(5) Meter cover
(6) Main terminal screws
(7) Terminal cover
(8) Communication module seal screws
(9) Meter metrology seal screws
(10) Status LED (Reserved for future use)
(11) Seal button
(12) Display button
(13) Terminal cover seal screw
(14) Communication module LED
(15) Meter mounting hole
(16) Meter mounting bracket
(17) RS485 port

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

2.2 Measurement System

The meter is with strong metrology ability.
The meter supports measurement of active energy, reactive energy and apparent energy in four quadrants.
The measurement resolution is 1 Wh / varh / VAh.
The meter supports measurement of instantaneous value including RMS voltage / current of each phase, energy power, power factor, frequency etc.
All these registers are refresh less than one second.
It's switchable between geometric measurement and arithmetic measurement.
The following picture shows the basic metrology architecture of the meter.

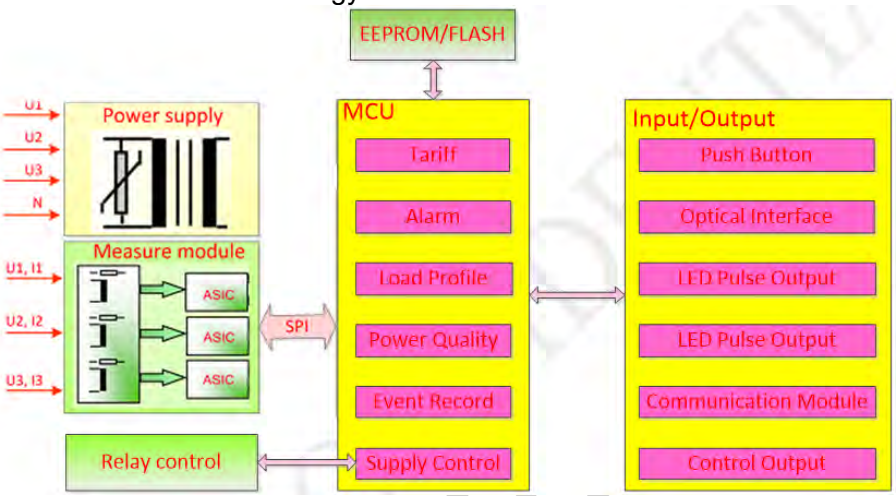


Figure 2.2 Measurement System

2.3 Features List

Measurement accuracy	Active: Class B Reactive: Class 2
Connection type	3-Phase 4-Wire, direct connection
Nominal voltage(Un)	3*230V / 400 V
Voltage range	0.8Un~1.2Un
Current range	0.25~5(100)A
Starting current	0.4%Ib
Frequency	50 Hz (± 5%)
Meter constant	2000 imp./kWh(kvarh)
Power consumption	Voltage circuit: < 2W / 10 VA per phase Current circuit: < 0.5 VA per phase
LCD	Segment type LCD
Backlight	NONE
Energy LED	One LED for active energy and one LED for reactive energy, two states for LED: 1) Blink: indicates energy import or export for corresponding energy type. 2) Off: indicates no load for corresponding energy type.
Buttons	Display button; Sealed button, unused.

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Communication interfaces	Optical port, DLMS/COSEM, HDLC on IEC 62056-21. DLMS/COSEM direct HDLC profile. P1 Port GPRS RS-485 CAT M + NB
RTC	Compliant with IEC 62054-21
Data retention	Over15years
Backup power supply	Super capacitor (support 5 days without the main supply)
Mechanical	Weight: 1.8 kg Ingress protection rating: IP54 without suction Dimension: L282.8 W170.4 H86.9 (mm)
Environmental	Limit temperature range: -40°C ~ +70°C Temperature range of storage and transport: -40°C ~ +80°C Relative humidity: Up to 95% non-condensing

2.4 Function Characteristics

Energy parameters	+A, -A +R, -R Import/Export energy TOU energy
Instantaneous parameters	U, I, P, Q, S, PF, Frequency
Tariff	- 8 tariffs switching scripts - 4 weeks profiles - 6 seasons profiles - 8 days profiles - 100 special days Refer to **Annexure II** for default configuration.
Load profile	Load profiles: - 15 minutes cumulative energy load profile - Daily load profile - Power quality profile - 4 configurable RS-485 load profiles
Tamper detection	Terminal cover removal detection (even when power off) Meter cover removal detection (even when power off) Inverse current detection Phase sequence reverse detection Magnetic field detection
Event log	Refer to clause of event logs
Self-diagnosis	The meter diagnoses the hardware at power on, or new firmware is deployed, periodically. Refer to **Annexure III** for meter status.
Measure period	The measuring period output (15min) over the optical interface
General block transfer	In the same time, only one client communication via GBT is supported. The maximum GBT length can support to get full entries load profile 1.
Certification mode	Define the Energy register resolution on the display

IQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

3. Meter Construction

3.1 Enclosure

Features of meter enclosure:

- The case is double insulated to protective class II.
- The case provides an ingress protection rating of IP54 without suction.
- The terminal block is molded in glass-filled polycarbonate.
- The main terminals are cage type.
- The main cover is fixed to the base during manufacturing and sealed with seal caps. It is impossible to open the main cover without breaking the seal cap.
- The terminal cover can be sealed for limit access to the main meter connections.
- The meter has face cover and terminal cover removal detection.
- The metal ring of the optical port is fixed under the face cover.
- One button is provided for display scrolling.
- The name plate is laser printed on the face cover and terminal cover.
- The wiring diagram is laser printed on face cover

3.2 Marking of the Meter


Front plate:



: Meter constant

230V 50Hz
0,25-5(65)A
EN 50470-3 Cl.B
IEC 62053-23 Cl.2 **:** Metrological parameters and accuracy

-40°C ~ +70°C **:** Temperature range of operation


: Bidirectional meter

kwhiq **:** Manufacture logo

IQ0304100B1: Meter type

The meter type has following structure: IQaabbcccddeeff+g

IQ	manufacturer:	IQ = KWH**IQ**
aa	Meter type:	03 = Three phase meter
bb	# wires:	04 = 4 wires
ccc	Max. current:	100 = 100A
dd	Model info:	b1 = Energy Monitoring BE/NL + RS-485, Geen disconnector

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ



: MID certificate markings

: Meter Serial number + Barcode(depend on the customer needs)

: Double insulation

: Import and export

: Communication protocol


2022 : Year of manufacture

: Wiring type (3 phase)


Module plate:

MN203-e : Communication Module.

MN203-e = supporting CAT-M + NB-IoT + 2G variant 03, equipped with eSIM (-e)

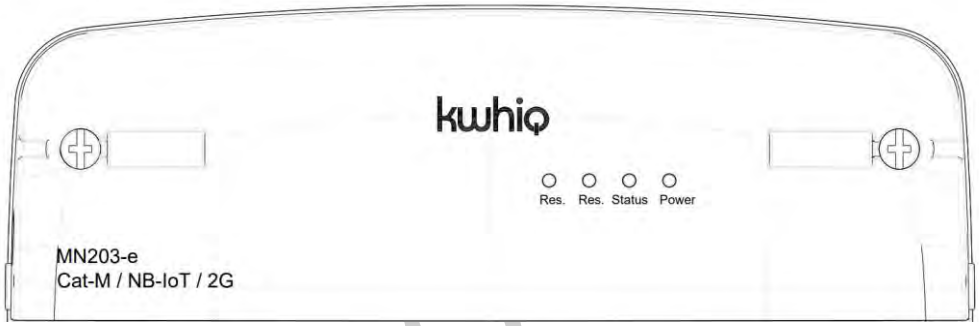

Wiring diagram: IQ0304100b1

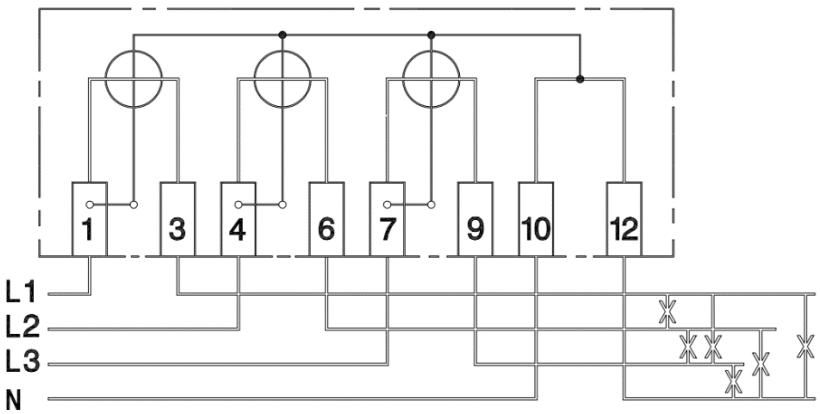

3 phase 4 wire

3.3 Sealing of Meter

KHWIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

The meter has two seals for the communication module, one for the manual billing button and optionally one for the terminal cover.

The meter has three seals for the meter face cover to seal the metrology part of the meter. It is impossible to touch the meter metrology part unless break the seals, the seals and the meter face cover or base are physically and clearly destroyed. Below picture –figure 3.3 shows the sealing position of the meter.

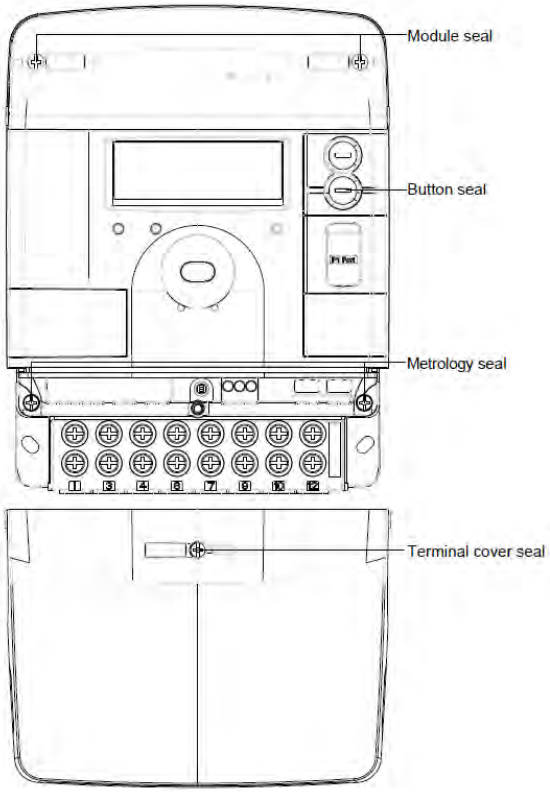


Figure 3.3 Sealing of meter

3.4 Push Button

The meter provides buttons.
The display button (top button) is used to alternate the display parameters manually.
The other button can be used for manual billing which is not applicable. That's why this button is sealed.

KHWIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ


4 Display Control

4.1 Display Introduction

The meter provides a display and push buttons as the local user interface.
Using the push button, the user can step through a menu structure on the display to check the consumption data and further information.
As shown in the below figure, the LCD is portioned into different segments, each fulfilling distinct needs.

4.2 Basic Layout

The basic layout shows all indication possibilities of the LCD.

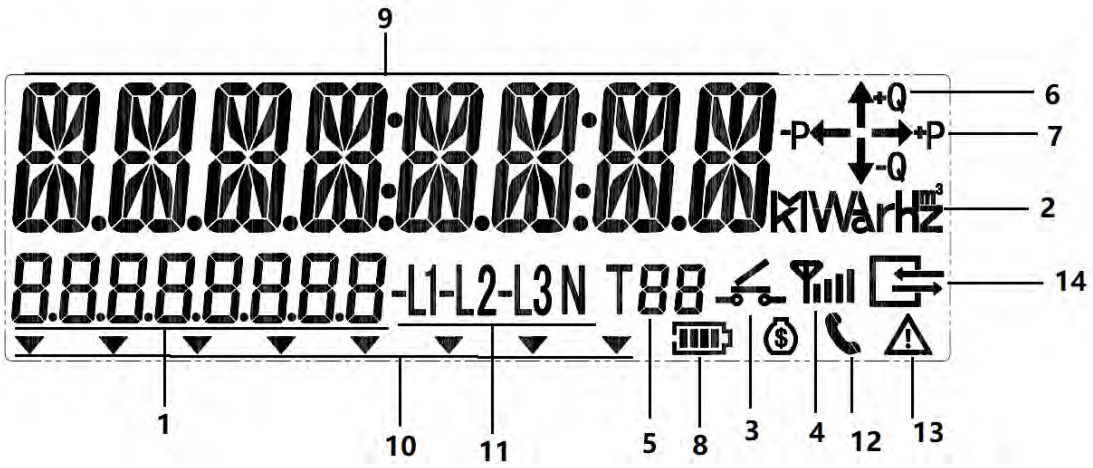

1 Numeric row
2 Unit indications
3 Main breaker state indication
4 signal strength
5 Rate indication
6 Reactive energy direction indication(+Q:import,-Q:export)
7 Active energy direction indication(+P:import,-P:export)
8 Not used
9 Alphanumeric row
10 Icons(more details on faceplate (F T M R))
11 Voltage phase presence
12 Not used
13 internal error detected

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

4.3 Display operating modes

The meter has 2 operating modes for the display. In each mode, the display list is configurable. For the complete configurable display items, please refer to the object model.

1. Auto Scroll Mode (default mode)

In this mode the information on the display is refreshed every 5 seconds.
The display list of auto scroll mode:

1-0:**1.8.0**.255	Active energy import (+A)-current value
1-0:**2.8.0**.255	Active energy export (-A)-current value
1-0:**1.7.0**.255	Active power import (+P)-instantaneous value
1-0:**2.7.0**.255	Active power export (-P)-instantaneous value

2. Button Scroll Mode

This mode can be activated manually by pressing the button. The display will turn back to the “Auto Scroll Mode” 60 seconds after releasing.

The display list of manual scroll mode:


{8,0-0:1.0.0.255,2},	Clock (Time on upper row, date on lower row. – no obis code)
{1,0-0:**97.98.0**.255,2}	Alarm Register 1
{1,0-0:**138.0.0**.255,2}	RS-485 interface status
{3,1-0:**1.8.0**.255,2},	Active energy import (+A)-current value
{3,1-0:**2.8.0**.255,2},	Active energy export (-A)-current value
{3,1-0:**1.8.1**.255,2},	Active energy import (+A)-current value(Rate T = 1)
{3,1-0:**1.8.2**.255,2},	Active energy import (+A)-current value(Rate T = 2)
{3,1-0:**2.8.1**.255,2},	Active energy export (-A)-current value(Rate T = 1)
{3,1-0:**2.8.2**.255,2},	Active energy export (-A)-current value(Rate T = 2)
{3,1-0:**14.7.0**.255,2},	Frequency
{3,1-0:**16.7.0**.255,2},	Active power Net value(|+P|-|-P|)
{3,1-0:**32.7.0**.255,2},	Voltage of L1
{3,1-0:**52.7.0**.255,2},	Voltage of L2
{3,1-0:**72.7.0**.255,2},	Voltage of L3
{3,1-0:**31.7.0**.255,2},	Current of L1
{3,1-0:**51.7.0**.255,2},	Current of L2
{3,1-0:**71.7.0**.255,2},	Current of L3
{47,0-0:**25.6.0**.255,2}	GSM operator
{47,0-0:**25.6.0**.255,3}	GSM registration status
{47,0-0:**25.6.0**.255,5}	GSM cs_attachment
{1,0-1:**94.31.6**.255,2}	Modem signal indicate strength

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ


{1,0-1:**94.31.7**.255,2}	Modem rsrp
{1,0-1:**94.31.8**.255,2}	Modem rsrq
{1,0-1:**94.31.9**.255,2}	Modem rssi
{45,0-0:**25.4.0**.255,2}	GPRS modem setup - APN
{1,0-1:**94.31.4**.255,2}	Modem iccid
{42,0-0:**25.1.0**.255,3}	IPv4 setup - IP_address
{1,1-0:**0.2.0**.255,2}	Active firmware Identifier(Legal firmware version)
{1,1-1:**0.2.0**.255,2}	Active firmware Identifier 1(APP firmware version)

Numeric row



- Shows the OBIS code. And shows the local time with the clock item {8,0-0:1.0.0.255,2},.

Alphanumeric row



- During normal operation, where the display is in “auto scroll mode”, the lower 9 numeric digit row on the display shows the total active energy and total reactive energy for each direction on a 5 second cycle.

Special characters on display

Symbol	Description	Purpose
	Unit identifier	Indicates the unit of measurement for the quantity shown on the display
	signal strength	The signal strength is categorized as following: No reception: RSRP < -120 dBm insufficient: -120 dBm <= RSRP < -100 dBm sufficient: -100 dBm <= RSRP < -90 dBm good: -90 dBm <= RSRP < -80 dBm excellent: -80 dBm <= RSRP The signal strength refresh period is 30sec.
	Flow direction	Shows the actual direction of the energy flow
	Unit identifier	Indicates the unit of the energy measurement
	Reactive energy	Displays the actual flow direction of reactive energy, reserve for future use.

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

	Icon	There are 12 triangles in the display activated by different states and events in the meter. On the meter cover just below the display is it corresponding triangle marking codes which explains the meaning of the triangles in the display Triangle marking consist of the following codes: L1: Phase 1 has voltages F : Meter cover opened T: Terminal cover opened M: Strong magnetic field detected R: Reversed Voltage phase sequence The rest of icons are reserved

4.4 Display Mode and Menu

The following display modes are available using 1 push button:

- Auto-Scroll Display mode
- Button Display mode

The meter support different display mode including automatically scrolling, manual operation and customer specific one.

The scrolling durations are configurable in steps of 1 second.
The display lists are configurable remotely and locally.
When the meter is power on, it will display firmware version of metrology part for five seconds. Then, the meter will run Auto display mode, it will scroll every five seconds automatically, this period is configurable from 5 to 60 seconds.


In the duration, the meter will run Manual display mode if any display button press. Then, you could scroll the display item by short press (short than two seconds, but suggest more than 200ms). If there is not button press for 60 seconds default, the meter will back to Auto display mode. This period is also configuration from 1 to 300 seconds.
The meter support separates the information into several screens once it’s more than 9 characters.

KWHIQ CONFIDENTIAL


Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Operation Guide

The display list could be configured using SmartSet.

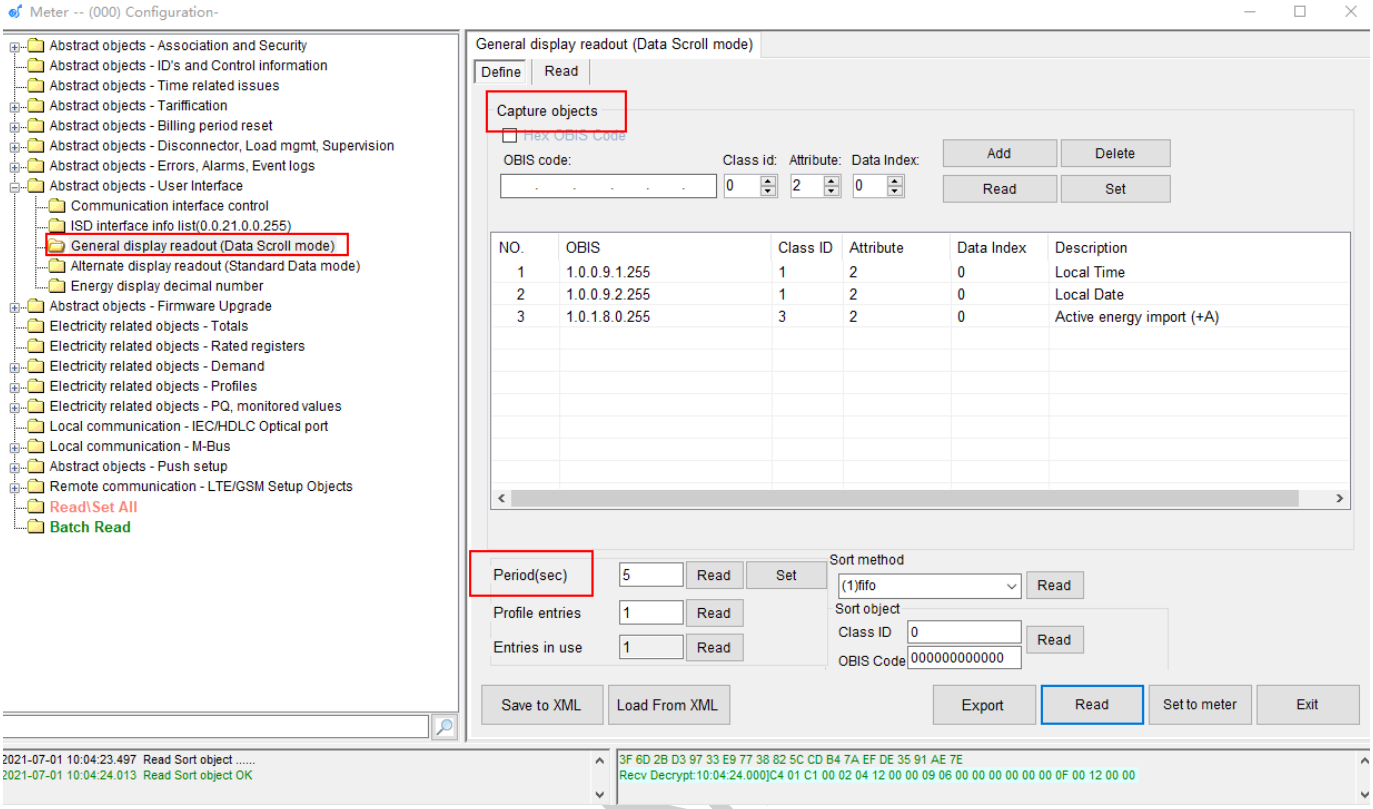

The energy display decimal number (default 0, range 0~3) can also be configured using smartest:

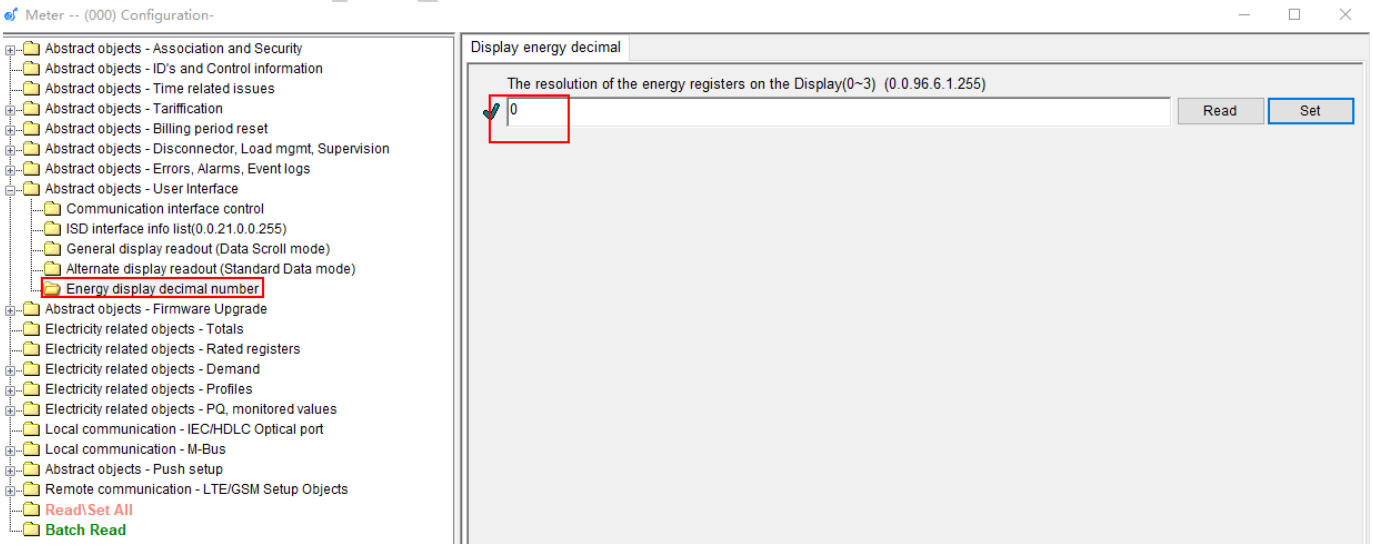

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

5 Alarm and Event Handling

A lot of events are generated by the meter itself or by its environment. All these events are logged in several event logs. Additionally, they are also used to set and clear errors as well as to trigger.

5.1 Alarm and Error

Some of the events can trigger alarms or error. If one of these events occurs, the corresponding flag in the alarm or error registers is set and an alarm and error is then raised via communication channel. All alarm or error flags in the alarm registers remain active until the alarm registers are cleared.

Each bit in the alarm registers represents a different alarm. If the bit is set (logical 1) the alarm (corresponding to position of the set bit) was recorded. The value in the Alarm Registers is a summary of all active and inactive alarms at that time.
Depending on the capabilities of the HES and the policy of the utility, not all possible alarms are wanted. Therefore, the Alarm Filters can be programmed to mask out unwanted alarms. The structure of the filter is the same as the structure of the Alarm Registers. To mask out unwanted alarms, the corresponding bits in Alarm Filters should be set to logical 0.

5.2 Alarm and Error Registers

Assignment of Error Register/Alarm Register 1 bits

Bit	Alarm	Triggering event ID(please check the object model if needed)
0	Clock invalid	6
1	Reserved	-
2	Reserved	-
3	Reserved	-
4	Reserved	-
5	Reserved	-
6	Reserved	-
7	Reserved	-
8	Program memory error	12
9	ram_error	13
10	nv_mem_err	14
11	Measurement system error	16
12	Watchdog error	15
13	Fraud attempt	40,42,44,46,49,50
14	Reserved	-
15	Reserved	-
16	Reserved	-
17	Reserved	-
18	Reserved	-
19	Reserved	-
20	Reserved	-
21	Reserved	-
22	Reserved	-
23	Reserved	-

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

24	Reserved	-
25	Reserved	-
26	Reserved	-
27	Reserved	-
28	Reserved	-
29	Reserved	-
30	Reserved	-
31	Reserved	-

Table 5.2.1 Assignment of Error Register/Alarm Register 1

Assignment of Alarm Register 2 bits

Bit	Alarm	Triggering event ID(please check the object model if needed)
0	Total Power Failure	01
1	Power Resume	02
2	Voltage Missing Phase L1	82
3	Voltage Missing Phase L2	83
4	Voltage Missing Phase L3	84
5	Voltage Normal Phase L1	85
6	Voltage Normal Phase L2	86
7	Voltage Normal Phase L3	87
8	Reserved	-
9	Reserved	-
10	Current Reversal	91
11	Wrong Phase Sequence (PP only)	88
12	Unexpected Consumption	52
13	Key Exchanged	48
14	Reserved	-
15	Reserved	-
16	Reserved	-
17	Reserved	-
18	Reserved	-
19	Reserved	-
20	Reserved	-
21	Reserved	-
22	Reserved	-
23	Reserved	-
24	Reserved	-
25	Reserved	-
26	Reserved	-
27	Reserved	-
28	Reserved	-
29	Reserved	-
30	Reserved	-
31	Reserved	-

Table 5.2.2 Assignment of Alarm Register 2

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

5.3 Event log profile

Log profile	capacity	objects	sorted method:
Standard Event Log	100	clock_time; standard event code	unsorted (FIFO)
Fraud detection Event Log	100	clock_time; fraud detection event code	unsorted (FIFO)
Power Quality log	100	clock_time; Power Quality event code	unsorted (FIFO)

Table 5.3 Event log profile list

5.4 Event codes list

Event Code	Name	Standard Event Log	Fraud Detection Log	Power Quality Event Log	Communication Log
1	Power Down	X			
2	Power Up	X			
3	Daylight saving time enabled or disabled	X			
4	Clock adjusted (old date/time)	X			
5	Clock adjusted (new date/time)	X			
6	Clock invalid	X			
9	TOU activated	X			
10	Error register cleared	X			
11	Alarm register cleared	X			
12	Program memory error	X			
13	RAM error	X			
14	NV memory error	X			
15	Watchdog error	X			
16	Measurement system error	X			
17	Firmware ready for activation	X			
18	Firmware activated	X			
19	Passive TOU programmed	X			
40	Terminal cover removed		X		
41	Terminal cover closed		X		
42	Strong DC field detected		X		
43	No strong DC field anymore		X		
44	Meter cover removed		X		
45	Meter cover closed		X		
46	Association authentication failure (n time failed authentication)		X		
47	One or more parameters changed	X			
48	Global key(s) changed	X			
49	Decryption or authentication failure (n time failure)		X		
50	Replay attack		X		
51	FW verification/activation failed	X			
76	Undervoltage L1			X	
77	Undervoltage L2			X	
78	Undervoltage L3			X	
79	Overvoltage L1			X	
80	Overvoltage L2			X	
81	Overvoltage L3			X	

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

82	Missing voltage L1			X	
83	Missing voltage L2			X	
84	Missing voltage L3			X	
85	Voltage L1 normal			X	
86	Voltage L2 normal			X	
87	Voltage L3 normal			X	
88	Phase sequence reversal	X			
91	Current Reversal		X		
140	No connection timeout				X
141	Modem Initialization failure				X
142	SIM Card failure				X
143	SIM Card ok				X
144	GSM registration failure				X
145	GPRS registration failure				X
146	PDP context established				X
147	PDP context destroyed				X
148	PDP context failure				X
149	Modem SW reset				X
150	Modem HW reset				X
152	GSM incoming connection				X
153	GSM hang-up				X
154	Diagnostic failure				X
155	User initialization failure				X
156	Signal quality low				X
157	Auto Answer Number of calls exceeded				X
214	Module removed		X		
215	Module inserted		X		
254	Load profile cleared	X			
255	Event log cleared	X	X	X	X

Table 5.4 Event codes list

6. Real Time Clock

The RTC complies with IEC 62054-21. At reference voltage and reference temperature (23°C), clock accuracy is better than ±0,5 s/day. The variation of the clock accuracy with the temperature shall be less than (±0,15 s/°C/24 h).

The RTC supports leap year, day light saving time. In case of power cut, the RTC of the meter can continue to run for about 5 days when the meter, with the support of super capacitor. If the RTC loses current time due to a long power down of more than 5 days, when the meter is powered on, RTC will continue to run with the time of last power down. However, the chronology of the measurement values will be sustained. In the case that tariff registers are used, a default tariff (tariff 1) will be used until the meter's clock is synchronized to a correct clock.

Meter time and date synchronization is possible through central system as well as via the optical interface. If the difference between the setting time and meter time is bigger than 7 seconds. The time will be set to the RTC. Time synchronization event will be logged in the log file.

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

7. Tariff Management

The meter calendar and tariff handling follows the same rules as defined in the IDIS package 2 specification [D]:

Tariffication activity calendar

The activity calendar supports the following:

- 6 seasons profiles
- 4 weeks profiles
- 8 days profiles
- 8 switching times per day

Within the “Tariffication activity calendar”, the integrity must be verified from season to days in the following way:

=> Each season profile references a valid week profile which again references valid day profiles

- keeping week profiles that are not referenced by a season profile is allowed
- keeping day profiles that are not referenced by a week profile is allowed
    - For setting the activate_passive_calendar_time attribute, the following conditions apply:
- Current date and time as local time (hundredths of seconds must be ignored)
- Day of Week must be handled correctly
- Deviation must be set to 0x8000
    - Status must be set to 0xFF

Tariffication special days table

Special days table support 200 entries.

The relevant entries take precedence over the “Tariffication activity calendar” object driven selection of a day profile. The day profile referenced in the “Tariffication special days table” activates the day_schedule of the day_profile_table in the “Tariffication activity calendar” object by referencing through the day_id.

If there is no valid day_id available in the day_profile_table, the special day request is simply ignored.

On special day table updates, the current “Tariffication activity calendar” actions and schedules are updated immediately.

Default tariffication script

Holds the script selector number as defined in the Tariffication Script Table which must be activated in the case of invalid tariff information or invalid clock.

Currently active energy tariff

Holds the name of the currently active mask as defined in the Register activation, the currently active energy tariff always display on LCD.

During the tariff activation and configuration, the meter records some tariff-related event log. Please see table 5.1 Standard Event Log.

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

8. Load Profiles

8.1 Load Profile Characteristics

Each load profile has the following characteristics:
A circular buffer is used for each load profile.
Each entry of load profile has a time stamp and load profile status word.
The capture interval of each load profile is programmable, configurable within below values: 900 seconds, 1800 seconds, 3600 seconds, and the default value is 900 seconds (15 minutes).
If power off cross capture points, the meter will supplement the missing points after power on.
The load profile supports read by range and by entry, also supports selectable capture objects.

8.2 Load Profile Status Word

Each load profile entry includes a load profile status word with eight bits:

Bit #	Description
7	**Power down(PDN):** This bit is set to indicate that a total power outage has been detected during the affected capture period.
6	**Reserved:** The reserved bit is always set to 0.
5	**Clock adjusted(CAD):** The bit is set when the clock has been adjusted by more than the synchronization limit.
4	**Reserved:** The reserved bit is always set to 0.
3	**Daylight saving(DST):** Indicates whether or not the daylight saving time is currently active. The bit is set if the daylight saving time is active (summer) and cleared during normal time (winter).
2	**Data not valid(DNV):** Indicates that the current entry may not be used for billing purposes without further validation because a special event has occurred.
1	**Clock invalid(CIV):** The power reserve of the calendar clock has been exhausted. The time is declared as invalid. At the same time the DNV bit is set.
0	**Critical error(ERR):** A serious error such as a hardware failure or a checksum error has occurred. If the ERR bit is set then also the DNV bit is set.

Table 9.2 load profile status

8.3 Load Profile List

The meter supports following load profiles:

Load Profile	Interval	Capacity	Capture Objects
Cumulative energy load profile(1-0:99.1.0.255)	15 Minutes	5280	{8,0-0:1.0.0.255,2} (Date Time) Time in load profile include the time zone {1,0-0:96.10.1.255,2} (AMR Profile Status Code Emeter) {3,1-0:1.8.0.255,2} (Active energy Import) {3,1-0:2.8.0.255,2} (Active energy Export)

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Power quality load profile(1-0:99.14.0.255)	10 Minutes	2160	{8,0-0:1.0.0.255,2} (Date Time) {1,0-0:96.10.3.255,2} Profile status - Power quality profile {3,1-0:1.27.0.255.2} Average +P {3,1-0:2.27.0.255.2} Average -P {3,1-0:3.27.0.255.2} Average +Q {3,1-0:4.27.0.255.2} Average -Q {3,1-0:32.25.0.255.2} Average voltage L1 {3,1-0:52.25.0.255.2} Average voltage L2 {3,1-0:72.25.0.255.2} Average voltage L3 {3,1-0:31.25.0.255.2} Average current L1 {3,1-0:51.25.0.255.2} Average current L2 {3,1-0:71.25.0.255.2} Average current L3 {3,1-0:13.25.0.255.2} Average power factor {3,1-0:33.25.0.255.2} Average power factor (L1) {3,1-0:53.25.0.255.2} Average power factor (L2) {3,1-0:73.25.0.255.2} Average power factor (L3)
Daily profile - daily(1-0:99.2.0.255)	86400s (each day)	31	{8,0-0:1.0.0.255,2,0} (Date Time) {1,0-0:96.10.2.255,2} (AMR Profile Status Code Emeter) {3,1-0:1.8.1.255,2} (Active energy Import rate 1) {3,1-0:1.8.2.255,2} (Active energy Import rate 2) {3,1-0:2.8.1.255,2} (Active energy Export rate 1) {3,1-0:2.8.2.255,2} (Active energy Export rate 2)
RS-485 profile 1 (0-0:99.1.0.255)	15 Minutes	960	To be used to log registers accessible through RS-485
RS-485 profile 2 (0-0:99.1.1.255)	15 Minutes	960	To be used to log registers accessible through RS-485
RS-485 profile 3 (0-0:99.1.2.255)	60 Minutes	240	To be used to log registers accessible through RS-485
RS-485 profile 4 (0-0:99.1.3.255)	86400s (each day)	4096	To be used to log registers accessible through RS-485

8.4 Load Profile Event Handling

IDIS describes the behaviour of the profile and the setting of the status bits considering different events. Please refer to the following section of the IDIS package2 specifications [D]:

- 7.5.8 Events

KHWIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

9. Power Quality

The smart meter refreshes the instantaneous value in real time, monitoring sag, swell and power fail of the voltage. And calculate the average value, maximum value and minimum value of the current and voltage in each measurement period 2.

9.1 Instantaneous Power values

For the monitoring of the instantaneous power values, the following functionality must be available:

- Instantaneous Voltage per phase.
- Instantaneous Current total and per phase.
- Instantaneous Frequency.
- Instantaneous power +P/-P/+Q/-Q total and per phase.
- Instantaneous power factor total and per phase.
- Average voltage.

Instantaneous measurements are supported by the following objects (captured object configurable):

Object / Attribute Name	Class	Ver.	OBIS code
Instantaneous voltage L1	3	0	1-0:x.7.0.255 x=32
Instantaneous voltage L2	3	0	1-0:x.7.0.255 x=52
Instantaneous voltage L3	3	0	1-0:x.7.0.255 x=72
Instantaneous current L1	3	0	1-0:x.7.0.255 x=31
Instantaneous current L2	3	0	1-0:x.7.0.255 x=51
Instantaneous current L3	3	0	1-0:x.7.0.255 x=71
Instantaneous net frequency	3	0	1-0:14.7.0.255
Instantaneous power (total) +P;-P;+Q;-Q ;	3	0	1-0:x.7.0.255 x=1,2,3,4
Instantaneous power (L1) +P;-P;+Q;-Q ;	3	0	1-0:x.7.0.255 x=21, 22, 23, 24
Instantaneous power (L2) +P;-P;+Q;-Q ;	3	0	1-0:x.7.0.255 x=41, 42, 43, 44
Instantaneous power (L3) +P;-P;+Q;-Q ;	3	0	1-0:x.7.0.255 x=61, 62, 63, 64
Instantaneous power factor (+A/+VA)	3	0	1-0:x.7.0.255 x=13
Instantaneous power factor (PF) L1	3	0	1-0:x.7.0.255 x=33
Instantaneous power factor (PF) L2	3	0	1-0:x.7.0.255 x=53
Instantaneous power factor (PF) L3	3	0	1-0:x.7.0.255 x=73
Average voltage L1	3	0	1-0:x.25.0.255 x=32
Average voltage L2	3	0	1-0:x.25.0.255 x=52
Average voltage L3	3	0	1-0:x.25.0.255 x=72

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

9.2 Sag and Swell detection

For the monitoring of sags and swells, the following functionality must be available:

- Number of sags and swells L1, L2 and L3

Furthermore, the following configuration items are supported:

- Threshold for voltage sag (default 207V range:120~228)
- Time threshold for voltage sag (default 60s range:1~300)
- Threshold for voltage swell (default 253V range 232~300)
- Time threshold for voltage swell (default 60s range 1~300)

The events will be recoded in a specific Power Quality event log.
The event time stamps in the power quality event log represent the start time of the Sag-, Swell- or Normal condition. It is not the timestamp of logging the event into the power quality log.

Voltage sag and swell (long under and over voltage) detection is supported by the following objects:

Object / Attribute Name	Class	Ver.	OBIS code
Threshold for voltage sag(long under voltage)	3	0	1-0:12.31.0.255
Time threshold for voltage sag (long under voltage)	3	0	1-0:12.43.0.255
Number of Voltage Sags L1	1	0	1-0:x.32.0.255 x=32
Number of Voltage Sags L2	1	0	1-0:x.32.0.255 x=52
Number of Voltage Sags L3	1	0	1-0:x.32.0.255 x=72
Threshold for voltage swell (long over-voltage)	3	0	1-0:12.35.0.255
Time threshold for long-term voltage swell (long over-voltage)	3	0	1-0:12.44.0.255
Number of Voltage Swells L1	1	0	1-0:x.36.0.255 x=32
Number of Voltage Swells L2	1	0	1-0:x.36.0.255 x=52
Number of Voltage Swells L3	1	0	1-0:x.36.0.255 x=72

9.3 Power Quality profile

The Power Quality Profile periodically records objects based on the options below:

- the average Voltage per phase
- the min Voltage per phase
- the max Voltage per phase

The period length for the averaging of voltage and current as well as the monitoring interval for the min / max detection is based on the configuration of the object “Measurement Period 2 for Instantaneous values” described below,

KHWIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Power Quality

Capacity: 2160 entries (per 10 minutes in 15 days)
Structure: Clock_time, profile_status, values
Capture period: 1,5,10,15,30,60 min, the value is equal to the measurement period of all the captured objects. Further, the measurement period of the captured objects and the capture_period must be synchronised.
The default setting is 10 minutes.
Captured objects: The default value is:

Clock	{8,0-0:1.0.0.255,2}
Profile status - Power quality profile	{1,0-0:96.10.3.255,2}
Average +P	{3,1-0:1.27.0.255.2}
Average -P	{3,1-0:2.27.0.255.2}
Average +Q	{3,1-0:3.27.0.255.2}
Average -Q	{3,1-0:4.27.0.255.2}
Average voltage L1	{3,1-0:32.25.0.255.2}
Average voltage L2	{3,1-0:52.25.0.255.2}
Average voltage L3	{3,1-0:72.25.0.255.2}
Average current L1	{3,1-0:31.25.0.255.2}
Average current L2	{3,1-0:51.25.0.255.2}
Average current L3	{3,1-0:71.25.0.255.2}
Average power factor	{3,1-0:13.25.0.255.2}
Average power factor L1	{3,1-0:33.25.0.255.2}
Average power factor L2	{3,1-0:53.25.0.255.2}
Average power factor L3	{3,1-0:73.25.0.255.2}

Buffer encoding: normal: clock with every entry
Selective access: by range and by entry
Sorted method: unsorted (FIFO)

Average voltage and current

The algorithm of the averaging calculation is based on the number of captured instantaneous voltage and current samples within the interval period. This allows to generate meaningful data in the event of a disrupted interval due to power failure or a time change event.
For example:

- ⇨ Voltage of 220V and Current of 10A with an averaging period of 10min
  When there is power off for 5min within this period, the results for the average voltage and current would be still 220V and 10A based on the collected samples while the device was powered.

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

10. Firmware Update

The meter firmware is designed according to WELMEC software guide 7.2. The metrological part of the firmware is separated from all other firmware elements.

The meter supports remote and local firmware update for metrological part, non-metrological part. The update of the firmware only starts after the new firmware is completely downloaded to the meter by checking the signature of the firmware.

Firmware update list:

Firmware	Description
Legal	Legal upgrade image, include measurement /load profile/demand/low derive related.
Non Legal	Application upgrade image,

Both remote and local meter firmware update can be protected with security level 6 and 7 of HLS. The meter records the event log for the firmware update.
The remote FW update follows the definition of the IDIS package 2 specification [D].
Please refer to the following section of the IDIS package2 specifications [D]: 6.9 Firmware Update
The meter supports only a single instance of the Image Transfer.
In case the meter supports the download of multiple parts of the firmware, it is the manufacturer's responsibility to ensure the proper identification and activation of these images.
Every image for download to the E-meter requires a digital signature.
The meter specifies the usage of the following algorithm => ECDSA P-256.
The activation of a new FW image requires the successful validation of the digital signature. The activation must be rejected in case the verification fails.

As part of the image verification, the E-meter checks the integrity of the received image and verifies the correctness of the image_identifier and image_size information (manufacturer specific data provided during the image transfer initialisation)

- Supported block size: 64 to 1024.
- The image file is encrypted using AES-128.
- Image transfer activation for scheduler.
- The FW Update client can be used for the image distribution via broadcast.

11. Communication Interfaces and Communication

The meter provides up to 5 communication interfaces:

Interface	Purpose	Baud Rate	Protocol
Optical port	Local communication	9600 bps	DLMS/COSEM HDLC profile
WAN	Remote communication	up to 1119kbps	DLMS/COSEM profile
P1	IHD – nearby readout	115200 bps	IEC 62056/21
S0 led + display	Local readout	N/A	N/A
RS-485	Read out Modbus sub-devices	up to 115200bps	RS-485

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

The optical port is located on the base meter. NBIoT, GPRS, RF or Cat-M are located on the communication module. The modular designed communication module supports plug and play. The communication module can be replaced without de-energizing the meter. All communication parameters and data are stored in the base meters.

11.1 Optical Port Communication

This optical port is used to read meter, to configure the meter parameter or to control the meter locally. In general, HHU or PC software is used to communicate with meter via this optical port.
Access to meter via this port is protected in a secure way as described in the security section.
The meter can be configured through the optical port only when local programmable mode is activated.

11.2 WAN Profile

The DLMS/COSEM communication via the WAN interface is based on TCP over the IPv4 or IPv6 stack in combination with the cellular radio transport layer. A detailed description of the DLMS/COSEM related communication profiles and service is available in the P2P WAN Implementation Guide [3].

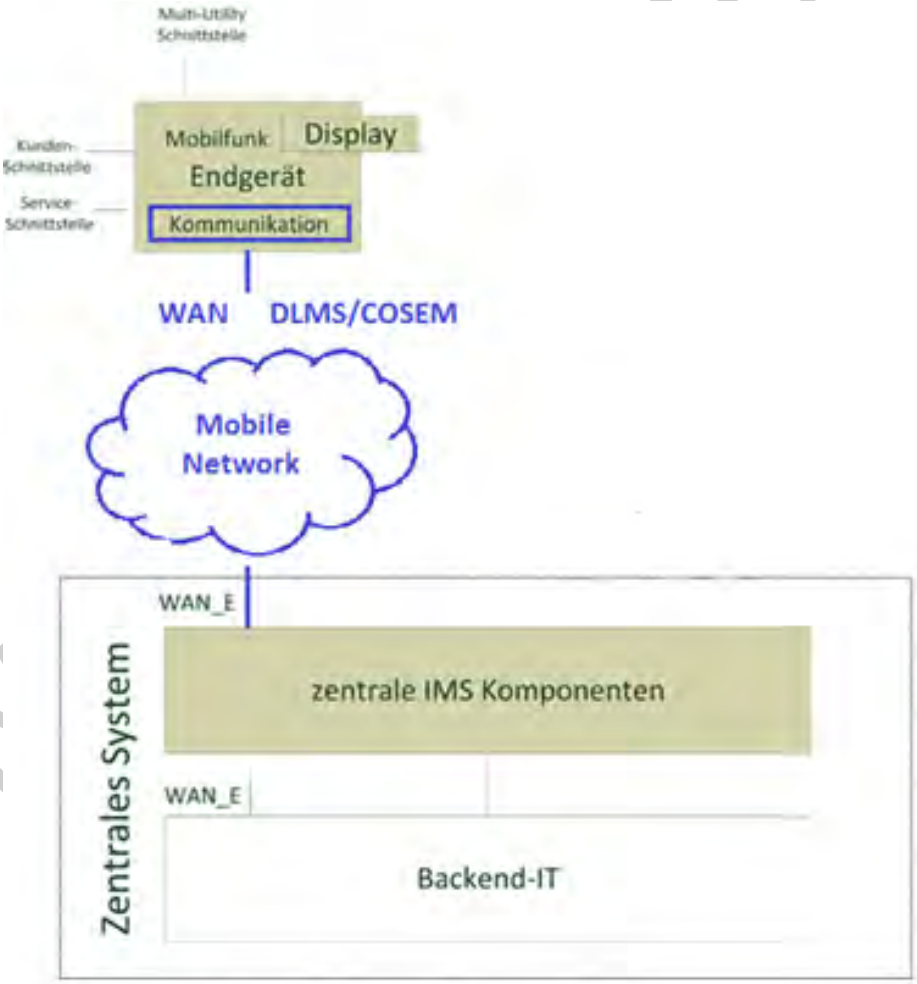


Figure 12.2.1 P2P-based metering profile

The P2P communication modem will act as a bridge between meters and Central Systems by enabling IP based transfers of meter data through mobile networks. On the network side, the modem shall be responsible for establishing and maintaining reliable IP connections to the customer's network. Contrarily on

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

the meter side, the modem will act as a server towards the meter, enabling the meter to have full control over the data that is sent or retrieved from the modem (through a set of AT-commands defined by the modem supplier).

11.3 P2P Functionality Description

The P2P communication interface is designed to directly access the meter by using mobile technology, such as LTE CATM and NBIOT. The interface conforms to the latest 3GPP standard release v14. The main features of the communication interface include:
Communication bands: FDD-LTE B3 /B8//B20;

- LTE CAT-M1(eMTC) - Uplink up to 1119kbps, Downlink up to 588kbps;
- NB-IOT - Uplink up to 66kbps, Downlink up to 34kbps;
- Data network access authentication with APN, Username, and Password;
- Support of push-Events, notification, and pull data;
- IP message & domain name resolution;
- PHY randomization procedure (preventing meters to send network registration request simultaneously)
- Support self-diagnostics (auto reset in case of network anomalies)
- Periodic ping to designated destinations;
- Register communication data volume including uplink and downlink

11.4 Communication to IHD

The communication interface between E-meter and IHD is P1 interface, and it complies with SSMR5_Annex 02-5 Dutch Smart Meter Requirements v5.0.2 Final P1. After the IHD has paired with the E-meter, the E-meter and IHD is in a one-way communication. The E-meter transmits the data to the IHD periodically.

- The message transmitted by the meter includes:
- Equipment identifier
- Actual meter energy reading of electricity meter
- Actual electrical power
- Short messages

11.5 RS-485

This communication port is mainly for MODBUS protocol, meter can retrieve data from MODBUS sub-devices and convert them to DLMS data type with proper objects definition. Up to 16 channels are supported as the sub-device, and there could be up to 48 registers in each MODBUS channel.
Meter also supports some other third-party defined communication protocol, such as Solax protocol and Omnik protocol under the implementation of “MODBUS” communication protocol. For more detailed information about these protocols, you may refer to “FS-IQ10083619 IQ0102065BNEM03 RS-485 functionality.pdf”

The default communication interface settings are as follows:

Start bit	1
Data bits	8
Parity	Even
Stop bit	1
Baud rate	9600
Reply timeout (ms)	1000

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

12. Security

12.1 Physical Security

The meter comply with double insulation of protective Class II followed EN62052-11. It could withstand 4KV AC voltage and 6KV impulse voltage test.

The meter has three seals for the meter face cover to seal the metrology part of the meter. It is impossible to access the metrological part of the meter unless the seals, the seals and the meter face cover or base are physically and clearly destroyed. The meter records the meter cover removal event and terminal cover removal event in both power on condition and power off condition with super cap charged.

The meter immunes magnetic field disturbance and records the magnetic field disturbance event.

The meter supports following anti-tamper features:

Event Code	Name	Description
40	Terminal cover removed	Indicates that the terminal cover has been removed.
41	Terminal cover closed	Indicates that the terminal cover has been closed.
42	Strong DC field detected	Indicates that a strong magnetic DC field has been detected.
43	No strong DC field anymore	Indicates that the strong magnetic DC field has disappeared.
44	Meter cover removed	Indicates that the meter cover has been removed.
45	Meter cover closed	Indicates that the meter cover has been closed.

Table 12.1.1 Fraud event

12.2 Communication Security

The meter support DLMS Suite 0 and could be upgraded to Suite 1.

		Security mechanism	Cryptographic Standard
HES/HHU -> electricity meter	data access security	High level of safety (HLS)	HLS-5 GMAC as specified in IST SP 800-38D:2007
	Data transmission security	Authentication Encryption	AES-GCM-128 as defined in FIPS PUB 197:2001

Unique keys are supported by the meter accordingly.

There are at least three access level supported with different keys. “Admin” and “Maintenance” could do the configuration and “Operator” can only read.

All the communication interface could be activated and deactivated by the following object.

Objects	OBIS	Description
Communication interface control (class_id 1)	0-1:94.31.128.255	1: communication activated 0: communication deactivated Bit0: cellular module interface Bit1: reserved for future use Bit2: P1 interface Bit3: Optical interface

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

12.3 Clients

The logical device can have several associations. The following section defines the usage and capabilities of these clients. There is a one to one assignment between the clients and the physical interface.
The access rights of these clients are indicated in Table 12.3.1: Client list.
Below type of clients need to be supported

- Public client (LAN/WAN)
- Management client (LAN/WAN)

Client	SPA ID	Access port	Mandatory Services	Establishment	Security setting
Public	16	LAN/WAN	- Block-transfer-with-get - Get - General-block-transfer - Action - Access	LOWEST SECURITY	LOWEST SECURITY
Management	1	LAN/WAN	- Block-transfer-with-get - Block-transfer-with-set - Get - Set - Multiple-references - Selective Access - Action - General-block-transfer - General-protection - Access	HLS5	- Security suite 0 - Security policy = all messages are authenticated and encrypted - Applicable keys: - Global Unicast Encryption key - Global Authentication key
				LLS	LLS Key

Table 12.3.1 Client list

KHWIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

13. Meter Installation

The meter should be installed at a dry and well-ventilated place. The installation board should be fixed on a solid, fire-resistant and sturdy wall.

13.1 Meter Dimension

The dimension of is 210mm×131.6mm×85.8mm. illustrate to figure 13.1.

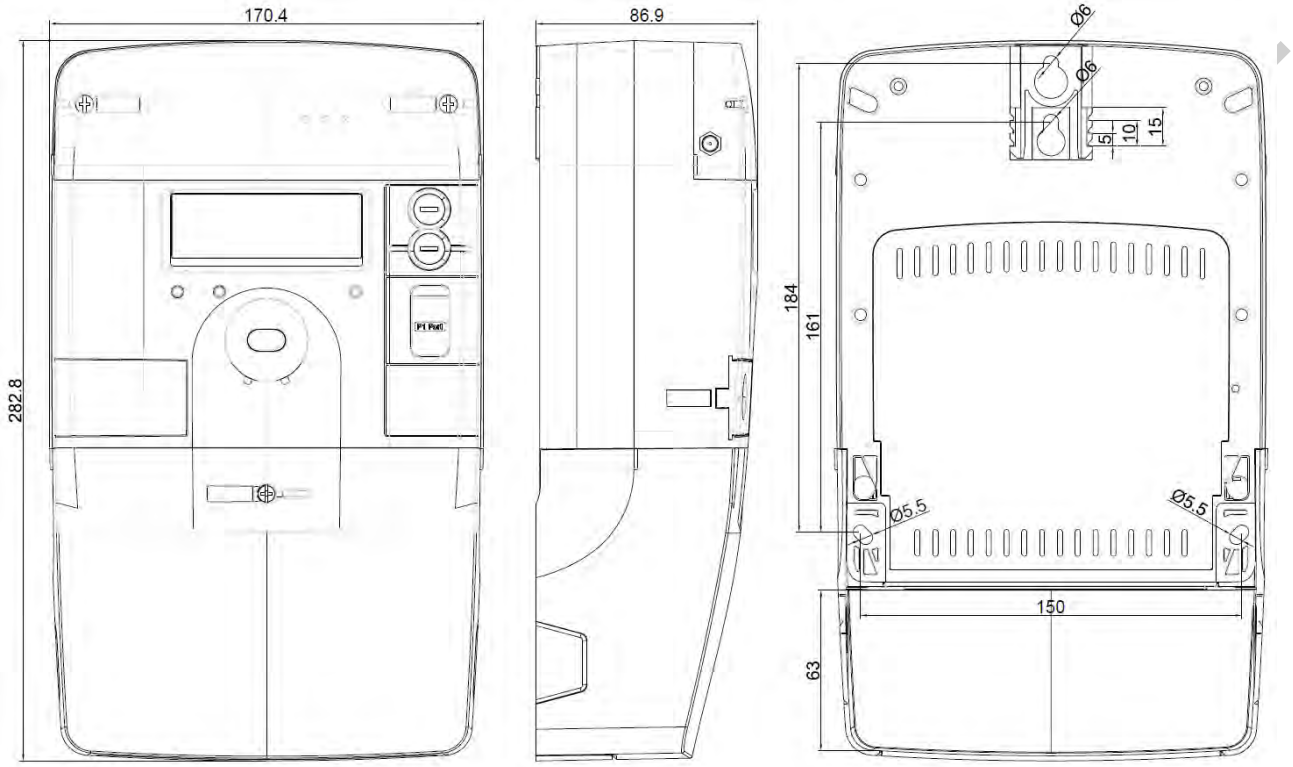


Figure 13.1 Dimension of meter

13.2 Wiring Diagram

The wiring diagram of meter in figure 13.2:

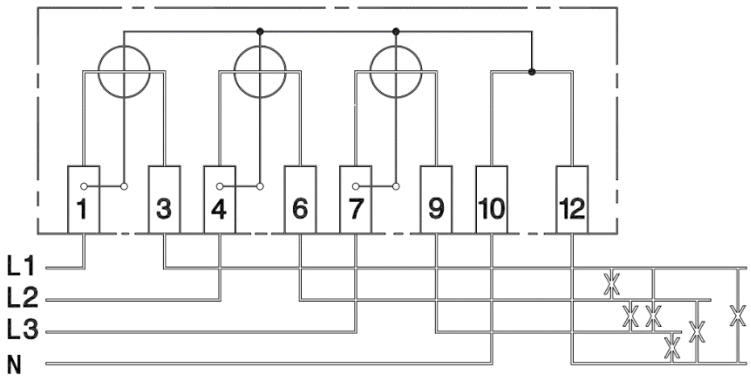



Figure 13.2 Wiring diagram

KHWIQ C


Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

13.3 Requirements on Wires

The terminal block allows inserting solid wires with varying cross-sectional area ranging from 2,5 to 25 mm^2.
The cable diameters shown are calculated for a conducting area of 25 mm^2, according to IEC60228-2004
Solid cable = 6.7 mm 1.9mm smaller than the mounting holes of the connectors
Stranded cable = 7.9 mm 0.7 mm smaller than the mounting holes of the connectors

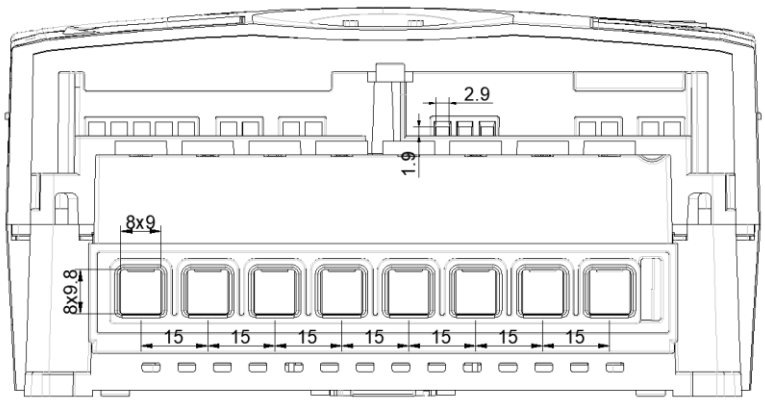

All terminal connectors are pre-assembled with combination-head screws (M7*13) that accept pozidriv screwdriver. The recommended torque for tightening the screws is at least 3.5Nm with screw driver.

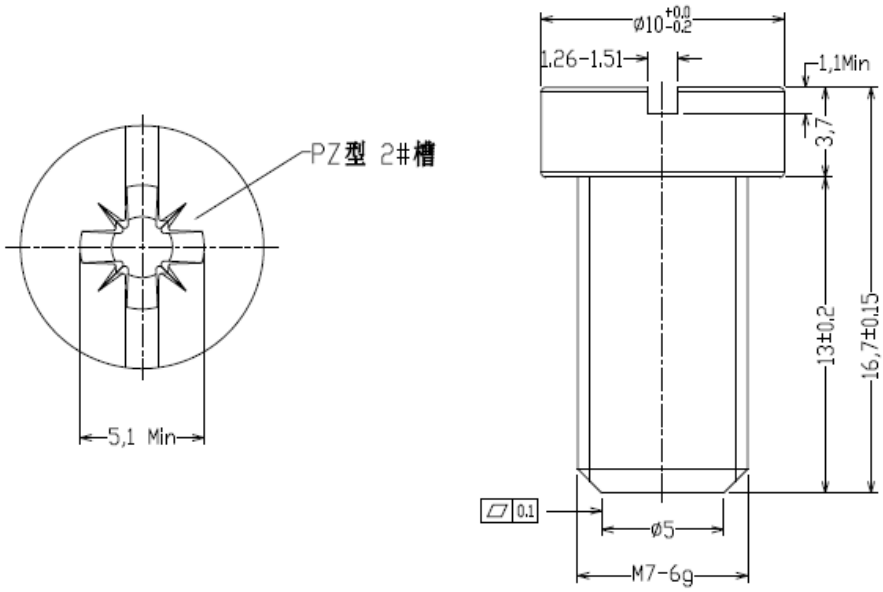

13.4 Tools for Installation

The following tools are needed for the meter installation:

1) Screw driver: Pozidriv screw driver for main terminal screw and PZ 2 screw driver for sealing screw. Fixing screw and Hook screw: M5 slotted countersunk (flat) head tapping screw.
2) Electric drill with M5 broach and plastic plug for concrete wall installation.

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Only appropriate tools may be used: the screw driver has to have the correct size for the screws and the metallic part of a screw driver has to be insulated.

13.5 Installation Steps

Step 1: Inspect meter before installation.
Before installation, please make sure there is no damage, broken or other defect on the meter. If defect is found, please don't install the meter.
Step 2: Fixing
The meter is a 3 points mounted meter, fixed by 1 hook and 2 fixing screws.
There are three hook points choice, supporting 3 different installation dimensions as below picture. The distance between hook and fixing hole is adjustable as following *figure 14.5.1*.

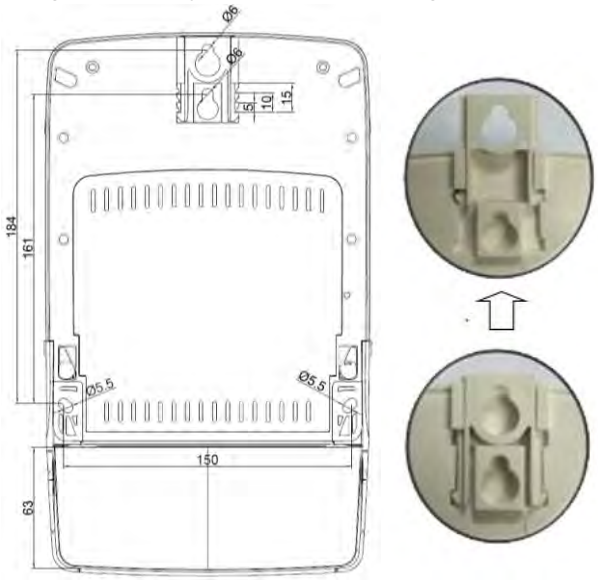


Figure 13.5.1 Installation hook

To fix meter, hang the meter by hook then fasten two fixing screws.
Step 3: Connect power wire

1. Turn off the power [Notice: To ensure safety, you should cut-off power before connect wire to meter]
2. Connect power wire according to wiring diagram which marked on the face cover
3. Check wire connect according to wire diagram
4. Resume power supply to meter
5. Check meter self-diagnostic with LCD display include wire connection indication
6. Then close the terminal cover.

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

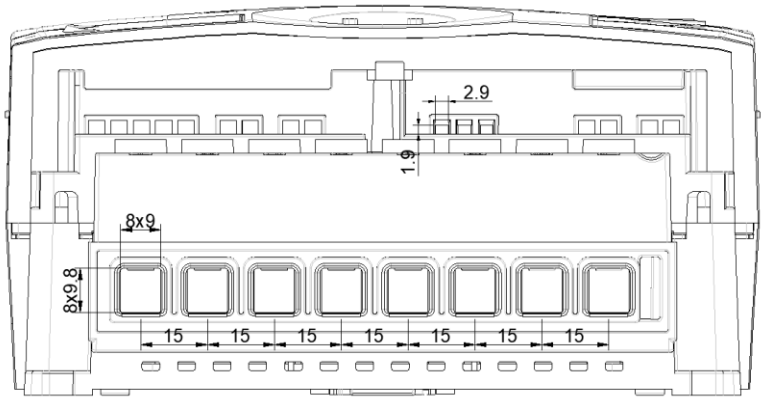



Figure 13.5.2 Terminal block

Connect power lines and fasten screw by pozidriv screw driver.

NOTICE To ensure the reliable connection, install torque must higher than 3.5Nm.

Weakening for cable entry for terminal cover

When the meter is connected the wire for 2,5 - 35mm² (DC meter), it needs to cut a large hole as shown below

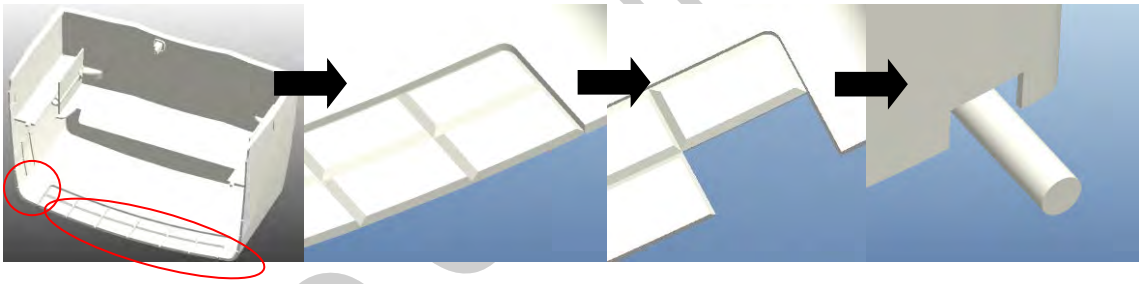

13.6 Communication module installation as illustrated below

Adhere to the following procedures when installing or replacing the module.

Installing the module:
Step 1: Break the communication module cover seals.
Step 2: Remove the screws and take off the cover, shown on picture 14.6-1
Step 3: If applicable: Firmly grasp the module and pull it from the meter.

Replacing the module:
Step 1: Firmly grasp the module and push it into the meter until it locks in place.
Step 2: Install the cover and ensure the cover is sealed again.
Step 3: Once the meter is in normal operation mode, the configuration of the module starts automatically.

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

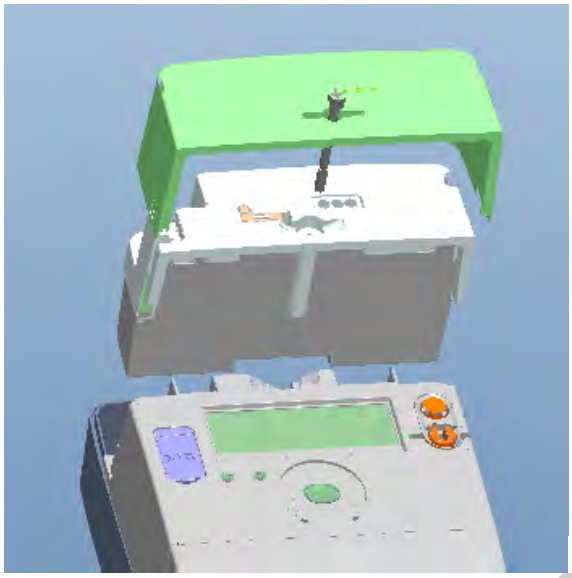


Figure 13.6.1: Removal of the modem cover

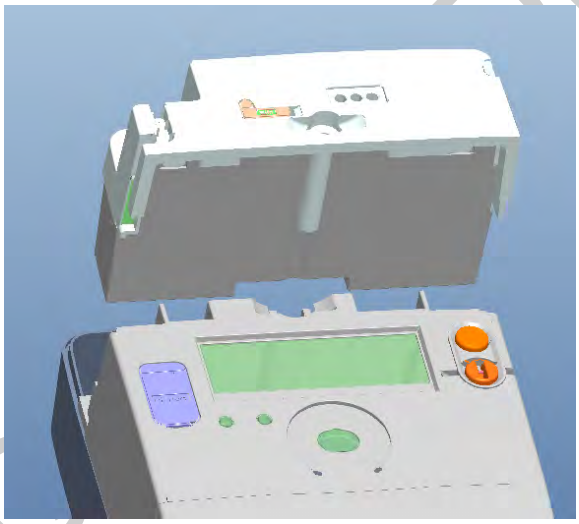


Figure 13.6.2: Removal of the mode

13.7 External antenna installation as illustrated below

It's possible to attach an external antenna in case there isn't sufficient mobile network coverage on the spot where the meter is installed.

Installing the module:

Step 1: Break the communication module cover seals.

Step 2: Remove the screws and take off the cover, shown on picture 14.6-1

Step 3: connect the external antenna to the MCX connector of the module. Guide the antenna wire through the groove.

Step 4: cut the weakening in the cover to allow the cable to come out of the housing.

Step 5: install the cover and ensure the cover is sealed again.



Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

14. Transport and Storage

The meters should be placed on kickstands and the height should not exceed 4 layers. The storage condition should be clean, with an environmental temperature of between -40°C and +80°C, relative humidity of less than 96% and with an absence of rusty matter in the air.

KHWIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Annexure I Display Item List

Auto-Scroll Display mode list:

Auto display mode list	OBIS CODE	OBIS CODE/Index	Description
1	{3,1-0:1.8.0.255,2},	1.8.0	Active energy import (+A)-current value
2	{3,1-0:2.8.0.255,2},	2.8.0	Active energy export (-A)-current value
3	{3,1-0:1.7.0.255,2,0},	1.7.0	Instantaneous active import power (+P)
4	{3,1-0:2.7.0.255,2,0},	2.7.0	Instantaneous active export power (-P)

Button Display mode list:

Manual display mode list	OBIS CODE	OBIS CODE/Index	Description
1	{8,0-0:1.0.0.255,2},	/	Clock
2	{1,0-0:97.98.0.255,2}	97.98.0	Alarm Register 1
3	{1,0-0:138.0.0.255,2}	138.0.0	RS-485 interface status
4	{3,1-0:1.8.0.255,2},	1.8.0	Active energy import (+A)-current value
5	{3,1-0:2.8.0.255,2},	2.8.0	Active energy export (-A)-current value
6	{3,1-0:1.8.1.255,2},	1.8.1	Active energy import (+A)-current value(Rate T = 1)
7	{3,1-0:1.8.2.255,2},	1.8.2	Active energy import (+A)-current value(Rate T = 2)
8	{3,1-0:2.8.1.255,2},	2.8.1	Active energy export (-A)-current value(Rate T = 1)
9	{3,1-0:2.8.2.255,2},	2.8.2	Active energy export (-A)-current value(Rate T = 2)
10	{3,1-0:14.7.0.255,2},	14.7.0	Frequency
11	{3,1-0:16.7.0.255,2},	16.7.0	Active power Net value(|+P|-|-P|)
12	{3,1-0:32.7.0.255,2},	32.7.0	Voltage of L1
13	{3,1-0:52.7.0.255,2},	52.7.0	Voltage of L2
14	{3,1-0:72.7.0.255,2},	72.7.0	Voltage of L3
15	{3,1-0:31.7.0.255,2},	31.7.0	Current of L1
16	{3,1-0:51.7.0.255,2},	51.7.0	Current of L2
17	{3,1-0:71.7.0.255,2},	71.7.0	Current of L3
18	{47,0-0:25.6.0.255,2}	25.6.0	GSM operator
19	{47,0-0:25.6.0.255,3}	25.6.0	GSM registration status
20	{47,0-0:25.6.0.255,5}	25.6.0	GSM cs_attachment
21	{1,0-1:94.31.6.255,2}	94.31.6	Modem signal indicate strength
22	{1,0-1:94.31.7.255,2}	94.31.7	Modem rsrp
23	{1,0-1:94.31.8.255,2}	94.31.8	Modem rsrq
24	{1,0-1:94.31.9.255,2}	94.31.9	Modem rssi
25	{45,0-0:25.4.0.255,2}	25.4.0	GPRS modem setup - APN
26	{1,0-1:94.31.4.255,2}	94.31.4	Modem iccid
27	{42,0-0:25.1.0.255,3}	25.1.0	IPv4 setup - IP_address

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

28	{1,1-0:0.2.0.255,2}	0.2.0	Active firmware Identifier(Legal firmware version)
29	{1,1-1:0.2.0.255,2}	0.2.0	Active firmware Identifier 1(APP firmware version)

The following OBIS codes can be configured into the auto display list and manual display list.

1	{8,0-0:1.0.0.255,2},	/	Clock time
2	{1,0-0:96.1.0.255,2},	96.1.0	Device ID1, manufacturing number
3	{3,1-0:1.8.0.255,2},	1.8.0	Active energy import (+A)-current value
4	{3,1-0:1.8.1.255,2},	1.8.1	Active energy import (+A)-current value(Rate T = 1)
5	{3,1-0:1.8.2.255,2},	1.8.2	Active energy import (+A)-current value(Rate T = 2)
6	{3,1-0:1.8.3.255,2},	1.8.3	Active energy import (+A)-current value(Rate T = 3)
7	{3,1-0:1.8.4.255,2},	1.8.4	Active energy import (+A)-current value(Rate T = 4)
8	{3,1-0:2.8.0.255,2},	2.8.0	Active energy export (-A)-current value
9	{3,1-0:2.8.1.255,2},	2.8.1	Active energy export (-A)-current value(Rate T = 1)
10	{3,1-0:2.8.2.255,2},	2.8.2	Active energy export (-A)-current value(Rate T = 2)
11	{3,1-0:2.8.3.255,2},	2.8.3	Active energy export (-A)-current value(Rate T = 3)
12	{3,1-0:2.8.4.255,2},	2.8.4	Active energy export (-A)-current value(Rate T = 4)
13	{3,1-0:3.8.0.255,2},	3.8.0	Reactive energy import (+R) -current value
14	{3,1-0:3.8.1.255,2},	3.8.1	Reactive energy import (+R) -current value(Rate T = 1)
15	{3,1-0:3.8.2.255,2},	3.8.2	Reactive energy import (+R) -current value(Rate T = 2)
16	{3,1-0:3.8.3.255,2},	3.8.3	Reactive energy import (+R) -current value(Rate T = 3)
17	{3,1-0:3.8.4.255,2},	3.8.4	Reactive energy import (+R) -current value(Rate T = 4)
18	{3,1-0:4.8.0.255,2},	4.8.0	Reactive energy export (-R)- current value
19	{3,1-0:4.8.1.255,2},	4.8.1	Reactive energy export (-R)- current value(Rate T = 1)
20	{3,1-0:4.8.2.255,2},	4.8.2	Reactive energy export (-R)- current value(Rate T = 2)
21	{3,1-0:4.8.3.255,2},	4.8.3	Reactive energy export (-R)- current value(Rate T = 3)
22	{3,1-0:4.8.4.255,2},	4.8.4	Reactive energy export (-R)- current value(Rate T = 4)
23	{3,1-0:5.8.0.255,2},	5.8.0	Reactive energy import (Q1) -current value
24	{3,1-0:5.8.1.255,2},	5.8.1	Reactive energy import (Q1) -current value(Rate T = 1)
25	{3,1-0:5.8.2.255,2},	5.8.2	Reactive energy import (Q1) -current value(Rate T = 2)
26	{3,1-0:5.8.3.255,2},	5.8.3	Reactive energy import (Q1) -current value(Rate T = 3)
27	{3,1-0:5.8.4.255,2},	5.8.4	Reactive energy import (Q1) -current value(Rate T = 4)
28	{3,1-0:6.8.0.255,2},	6.8.0	Reactive energy export (Q2)- current value
29	{3,1-0:6.8.1.255,2},	6.8.1	Reactive energy export (Q2)- current value(Rate T = 1)
30	{3,1-0:6.8.2.255,2},	6.8.2	Reactive energy export (Q2)- current value(Rate T = 2)
31	{3,1-0:6.8.3.255,2},	6.8.3	Reactive energy export (Q2)- current value(Rate T = 3)
32	{3,1-0:6.8.4.255,2},	6.8.4	Reactive energy export (Q2)- current value(Rate T = 4)
33	{3,1-0:7.8.0.255,2},	7.8.0	Reactive energy import (Q3) -current value
34	{3,1-0:7.8.1.255,2},	7.8.1	Reactive energy import (Q3) -current value(Rate T = 1)
35	{3,1-0:7.8.2.255,2},	7.8.2	Reactive energy import (Q3) -current value(Rate T = 2)
36	{3,1-0:7.8.3.255,2},	7.8.3	Reactive energy import (Q3) -current value(Rate T = 3)

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

37	{3,1-0:7.8.4.255,2},	7.8.4	Reactive energy import (Q3) -current value(Rate T = 4)
38	{3,1-0:8.8.0.255,2},	8.8.0	Reactive energy export (Q4)- current value
39	{3,1-0:8.8.1.255,2},	8.8.1	Reactive energy export (Q4)- current value(Rate T = 1)
40	{3,1-0:8.8.2.255,2},	8.8.2	Reactive energy export (Q4)- current value(Rate T = 2)
41	{3,1-0:8.8.3.255,2},	8.8.3	Reactive energy export (Q4)- current value(Rate T = 3)
42	{3,1-0:8.8.4.255,2},	8.8.4	Reactive energy export (Q4)- current value(Rate T = 4)
43	{3,1-0:1.7.0.255,2},	1.7.0	Instantaneous active import power (+P)
44	{3,1-0:2.7.0.255,2},	2.7.0	Instantaneous active export power (-P)
45	{3,1-0:3.7.0.255,2},	3.7.0	Instantaneous reactive import power (+Q)
46	{3,1-0:4.7.0.255,2},	4.7.0	Instantaneous reactive export power (-Q)
47	{3,1-0:32.7.0.255,2},	32.7.0	Voltage of L1
48	{3,1-0:52.7.0.255,2},	52.7.0	Voltage of L2
49	{3,1-0:72.7.0.255,2},	72.7.0	Voltage of L3
50	{3,1-0:31.7.0.255,2},	31.7.0	Current of L1
51	{3,1-0:51.7.0.255,2},	51.7.0	Current of L2
52	{3,1-0:71.7.0.255,2},	71.7.0	Current of L3
53	{3,1-0:33.7.0.255,2},	33.7.0	Power factor of L1 (for pp)
54	{3,1-0:13.7.0.255,2},	13.7.0	Power factor (for sp)
55	{3,1-0:14.7.0.255,},	14.7.0	Frequency
56	{20,0-0:13.0.0.255,2},	13.0.0	Active calendar name
57	{3,1-0:16.7.0.255,2},	16.7.0	Active power Net value(|+P|-|-P|)
58	{3,1-0:32.7.0.255,2},	32.7.0	Voltage of L1
59	{3,1-0:31.7.0.255,2},	31.7.0	Current of L1
60	{47,0-0:25.6.0.255,2}	25.6.0	GSM operator
61	{47,0-0:25.6.0.255,3}	25.6.0	GSM registration status
62	{47,0-0:25.6.0.255,5}	25.6.0	GSM cs_attachment
63	{1,0-1:94.31.6.255,2}	94.31.6	Modem signal indicate strength
64	{1,0-1:94.31.7.255,2}	94.31.7	Modem rsrp
65	{1,0-1:94.31.8.255,2}	94.31.8	Modem rsrq
66	{1,0-1:94.31.9.255,2}	94.31.9	Modem rssi
67	{45,0-0:25.4.0.255,2}	25.4.0	GPRS modem setup - APN
68	{1,0-1:94.31.4.255,2}	94.31.4	Modem iccid
69	{42,0-0:25.1.0.255,3}	25.1.0	IPv4 setup - IP_address
70	{1,1-0:0.2.0.255,2}	0.2.0	Active firmware Identifier(Legal firmware version)
71	{1,1-1:0.2.0.255,2}	0.2.0	Active firmware Identifier 1(APP firmware version)

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Annexure II Objects list (partly)

Objects	IC	OBIS
Billing period counter	1	0.0.0.1.0.255
COSEM logical device name	1	0.0.42.0.0.255
Security - Receive frame counter - unicast key	1	0.0.43.1.0.255
Security-Receive Frame Counter -broadcast Key	1	0.0.43.1.1.255
Invocation Counter for authenticated decryption (IC Rx) --- readout	1	0.0.43.2.0.255
Invocation Counter for authenticated decryption (IC Rx) --- maintenance	1	0.0.43.4.0.255
Device ID 1	1	0.0.96.1.0.255
Device ID 2	1	0.0.96.1.1.255
Device ID 4	1	0.0.96.1.3.255
Device ID 5	1	0.0.96.1.4.255
Device ID 6, IDIS certification number	1	0.0.96.1.5.255
display energy dot	1	0.0.96.6.1.255
display demand dot	1	0.0.96.6.2.255
Number of long power failures in any phase	1	0.0.96.7.9.255
Number of Short Power Failure in Any Phases	1	0.0.96.7.21.255
Profile Status 1 (Load profile with period 1)	1	0.0.96.10.1.255
Profile Status 2 (Load profile with period 2/Daily)	1	0.0.96.10.2.255
Profile status - Power Quality profile	1	0.0.96.10.3.255
AMR profile status for Month Billing	1	0.0.96.10.4.255
AMR profile status for Daily Billing	1	0.0.96.10.5.255
Event Object -Standard Event Log	1	0.0.96.11.0.255
Event Object -Fraud Detection Log	1	0.0.96.11.1.255
Event Object -Power Quality Log	1	0.0.96.11.4.255
Event Object - Communication Log	1	0.0.96.11.5.255
Consumer Message Text	1	0.0.96.13.0.255
Currently Active Energy Tariff	1	0.0.96.14.0.255
max credit limit	1	0.0.96.50.1.255
Error Register	1	0.0.97.97.0.255
Alarm Register 1	1	0.0.97.98.0.255
Alarm Register 2	1	0.0.97.98.1.255
Alarm Filter 1	1	0.0.97.98.10.255
Alarm Filter 2	1	0.0.97.98.11.255
Alarm Descriptor 1	1	0.0.97.98.20.255
Alarm Descriptor 2	1	0.0.97.98.21.255
RS-485 interface baudrate	1	0.0.129.0.0.255
RS-485 interface line setting	1	0.0.130.0.0.255
Transparent mode TCP port	1	0.0.131.0.0.255
RS-485 Measurement channel map	1	0.0.133.0.0.255
RS-485 interface protocol	1	0.0.135.0.0.255

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

RS-485 Readout configuration	1	0.0.137.0.0.255
Global RS-485 interface status	1	0.0.138.0.0.255
Transparent mode IP whitelist	1	0.0.139.0.0.255
RS-485 Measurement channel DLMS configuration	1	0.0.140.0.0.255
RS-485 Readout state / trigger	1	0.0.141.0.0.255
Modem version	1	0.1.94.31.0.255
Modem sub version	1	0.1.94.31.1.255
Modem imei	1	0.1.94.31.2.255
Modem imsi	1	0.1.94.31.3.255
Modem iccid	1	0.1.94.31.4.255
Modem msisdn	1	0.1.94.31.5.255
Modem signal indicate	1	0.1.94.31.6.255
Modem RSRP	1	0.1.94.31.7.255
Modem rsrq	1	0.1.94.31.8.255
Modem rssi	1	0.1.94.31.9.255
Modem snr	1	0.1.94.31.10.255
Modem pci	1	0.1.94.31.11.255
Modem band	1	0.1.94.31.12.255
Modem band	1	0.1.94.31.13.255
Modem reset timer	1	0.1.94.31.14.255
Modem random delay timer	1	0.1.94.31.15.255
Modem FOTA URL	1	0.1.94.31.16.255
Modem NTP server	1	0.1.94.31.17.255
Modem System configuration	1	0.1.94.31.18.255
Modem Band configuration	1	0.1.94.31.19.255
Modem chap password	1	0.1.94.31.20.255
FOTA login parameter	1	0.1.94.31.21.255
FOTA packet parameter	1	0.1.94.31.23.255
FOTA status	1	0.1.94.31.24.255
Communication port enable/disable control	1	0.1.94.31.128.255
Active firmware identifier	1	1.0.0.2.0.255
Active firmware signature	1	1.0.0.2.8.255
electric output type	1	1.0.0.3.128.255
led output type	1	1.0.0.3.129.255
Local Time	1	1.0.0.9.1.255
Local Date	1	1.0.0.9.2.255
Energy Acc Mode	1	1.0.0.11.2.255
Number of Under Voltages in phase L1	1	1.0.32.32.0.255
Number of Over Voltage (swell) in phase L1	1	1.0.32.36.0.255
Number of Voltage Cuts in phase L1	1	1.0.32.40.0.255
Number of Under Voltages (sag) in phase L2	1	1.0.52.32.0.255
Number of Over Voltage (swell) in phase L2	1	1.0.52.36.0.255
Number of Voltage Cuts in phase L2	1	1.0.52.40.0.255

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Number of Under Voltages (sag) in phase L3	1	1.0.72.32.0.255
Number of Over Voltage (swell) in phase L3	1	1.0.72.36.0.255
Number of Voltage Cuts in phase L3	1	1.0.72.40.0.255
clear tamper	1	1.0.94.98.69.255
Active firmware Identifier 1	1	1.1.0.2.0.255
Active firmware signature 1	1	1.1.0.2.8.255
Active Quadrant	1	1.1.94.14.100.255
P1 version	1	1.3.0.2.8.255
Duration of last long power failure in any phase	3	0.0.96.7.19.255
Time threshold for long power failure	3	0.0.96.7.20.255
Voltage Threshold for long power failure	3	0.0.96.7.128.255
Instantaneous Temperature	3	0.0.96.9.0.255
Basic/nominal current	3	1.0.0.6.1.255
Frequency	3	1.0.0.6.2.255
Maximum current	3	1.0.0.6.3.255
Reference voltage for power quality measurement	3	1.0.0.6.4.255
Clock Time Shift Limit	3	1.0.0.9.11.255
Instantaneous active import power (+A)	3	1.0.1.7.0.255
Active energy import (+A)	3	1.0.1.8.0.255
Active energy import (+A) rate 1	3	1.0.1.8.1.255
Active energy import (+A) rate 2	3	1.0.1.8.2.255
Active energy import (+A) rate 3	3	1.0.1.8.3.255
Active energy import (+A) rate 4	3	1.0.1.8.4.255
Increment active energy import (+A)	3	1.0.1.9.0.255
Increment active energy import (+A) rate 1	3	1.0.1.9.1.255
Increment active energy import (+A) rate 2	3	1.0.1.9.2.255
Increment active energy import (+A) rate 3	3	1.0.1.9.3.255
Increment active energy import (+A) rate 4	3	1.0.1.9.4.255
Average active import power(+P)	3	1.0.1.27.0.255
Active energy import (+A) (interval)	3	1.0.1.29.0.255
Instantaneous active export power (-A)	3	1.0.2.7.0.255
Active energy export (−A)	3	1.0.2.8.0.255
Active energy export (−A) rate 1	3	1.0.2.8.1.255
Active energy export (−A) rate 2	3	1.0.2.8.2.255
Active energy export (−A) rate 3	3	1.0.2.8.3.255
Active energy export (−A) rate 4	3	1.0.2.8.4.255
Increment active energy export (-A)	3	1.0.2.9.0.255
Increment active energy export (-A) rate 1	3	1.0.2.9.1.255
Increment active energy export (-A) rate 2	3	1.0.2.9.2.255
Increment active energy export (-A) rate 3	3	1.0.2.9.3.255
Increment active energy export (-A) rate 4	3	1.0.2.9.4.255
Average active export power(-P)	3	1.0.2.27.0.255
Active energy Export (-A) (interval)	3	1.0.2.29.0.255

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Instantaneous reactive import power (+R)	3	1.0.3.7.0.255
Reactive energy import (+R)(QI+QII)	3	1.0.3.8.0.255
Reactive energy (+R) rate 1	3	1.0.3.8.1.255
Reactive energy (+R) rate 2	3	1.0.3.8.2.255
Reactive energy (+R) rate 3	3	1.0.3.8.3.255
Reactive energy (+R) rate 4	3	1.0.3.8.4.255
Increment reactive energy import (+R)	3	1.0.3.9.0.255
Increment reactive energy (+R) rate 1	3	1.0.3.9.1.255
Increment reactive energy (+R) rate 2	3	1.0.3.9.2.255
Increment reactive energy (+R) rate 3	3	1.0.3.9.3.255
Increment reactive energy (+R) rate 4	3	1.0.3.9.4.255
Average reactive import power(+Q)	3	1.0.3.27.0.255
Reactive energy import (+R)(QI+QII) (interval)	3	1.0.3.29.0.255
Instantaneous reactive export power (-R)	3	1.0.4.7.0.255
Reactive energy export (-R)(QIII+QIV)	3	1.0.4.8.0.255
Reactive energy (-R) rate 1	3	1.0.4.8.1.255
Reactive energy (-R) rate 2	3	1.0.4.8.2.255
Reactive energy (-R) rate 3	3	1.0.4.8.3.255
Reactive energy (-R) rate 4	3	1.0.4.8.4.255
Increment reactive energy export (-R)	3	1.0.4.9.0.255
Increment reactive energy (-R) rate 1	3	1.0.4.9.1.255
Increment reactive energy (-R) rate 2	3	1.0.4.9.2.255
Increment reactive energy (-R) rate 3	3	1.0.4.9.3.255
Increment reactive energy (-R) rate 4	3	1.0.4.9.4.255
Average reactive export power(-Q)	3	1.0.4.27.0.255
Reactive energy export (-R)(QIII+QIV) (interval)	3	1.0.4.29.0.255
Reactive energy QI (+Ri)	3	1.0.5.8.0.255
Reactive energy (QI) rate 1	3	1.0.5.8.1.255
Reactive energy (QI) rate 2	3	1.0.5.8.2.255
Reactive energy (QI) rate 3	3	1.0.5.8.3.255
Reactive energy (QI) rate 4	3	1.0.5.8.4.255
Reactive energy QII (+Rc)	3	1.0.6.8.0.255
Reactive energy (QII) rate 1	3	1.0.6.8.1.255
Reactive energy (QII) rate 2	3	1.0.6.8.2.255
Reactive energy (QII) rate 3	3	1.0.6.8.3.255
Reactive energy (QII) rate 4	3	1.0.6.8.4.255
Reactive energy QIII (-Ri)	3	1.0.7.8.0.255
Reactive energy (QII) rate 1	3	1.0.7.8.1.255
Reactive energy (QII) rate 2	3	1.0.7.8.2.255
Reactive energy (QII) rate 3	3	1.0.7.8.3.255
Reactive energy (QII) rate 4	3	1.0.7.8.4.255
Reactive energy QIV (-Rc)	3	1.0.8.8.0.255
Reactive energy (QIV) rate 1	3	1.0.8.8.1.255

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Reactive energy (QIV) rate 2	3	1.0.8.8.2.255
Reactive energy (QIV) rate 3	3	1.0.8.8.3.255
Reactive energy (QIV) rate 4	3	1.0.8.8.4.255
Threshold for Under Voltage (sag)	3	1.0.12.31.0.255
Threshold for Over Voltage (swell)	3	1.0.12.35.0.255
Threshold for missing voltage (voltage cut)	3	1.0.12.39.0.255
Time Threshold for Under Voltage (sag)	3	1.0.12.43.0.255
Time threshold for Over Voltage (swell)	3	1.0.12.44.0.255
Time threshold for voltage cut	3	1.0.12.45.0.255
Instantaneous Power factor (+A/+VA)	3	1.0.13.7.0.255
Average Power factor import (|+P/+S|)	3	1.0.13.25.0.255
Instantaneous net frequency	3	1.0.14.7.0.255
Instantaneous active power (|+A|+|-A|)	3	1.0.15.7.0.255
Active energy (|+A|+|-A|) Combined total	3	1.0.15.8.0.255
Active power net value((|+A|-|-A|)	3	1.0.16.7.0.255
Active energy (|+A|-|-A|) Net total	3	1.0.16.8.0.255
Active energy net total (|+A|-|-A|) rate 1	3	1.0.16.8.1.255
Active energy net total (|+A|-|-A|) rate 2	3	1.0.16.8.2.255
Active energy net total (|+A|-|-A|) rate 3	3	1.0.16.8.3.255
Active energy net total (|+A|-|-A|) rate 4	3	1.0.16.8.4.255
Instantaneous active import power (+A) L1	3	1.0.21.7.0.255
Active energy import (+A) L1	3	1.0.21.8.0.255
Active energy import (+A) L1 Tariff 1	3	1.0.21.8.1.255
Active energy import (+A) L1 Tariff 2	3	1.0.21.8.2.255
Active energy import (+A) L1 Tariff 3	3	1.0.21.8.3.255
Active energy import (+A) L1 Tariff 4	3	1.0.21.8.4.255
Instantaneous active export power (-A) L1	3	1.0.22.7.0.255
Active energy export (-A) L1	3	1.0.22.8.0.255
Active energy export (-A) L1 Tariff 1	3	1.0.22.8.1.255
Active energy export (-A) L1 Tariff 2	3	1.0.22.8.2.255
Active energy export (-A) L1 Tariff 3	3	1.0.22.8.3.255
Active energy export (-A) L1 Tariff 4	3	1.0.22.8.4.255
Instantaneous reactive import power (+R) L1	3	1.0.23.7.0.255
Instantaneous reactive export power (-R) L1	3	1.0.24.7.0.255
Instantaneous current L1	3	1.0.31.7.0.255
Instantaneous current L1 THD	3	1.0.31.7.124.255
Average current L1	3	1.0.31.25.0.255
Instantaneous voltage L1	3	1.0.32.7.0.255
Instantaneous voltage L1 THD	3	1.0.32.7.124.255
Average voltage L1	3	1.0.32.25.0.255
Duration of Under Voltage (sag) in phase L1	3	1.0.32.33.0.255
Magnitude of Under Voltage (sag) in phase L1	3	1.0.32.34.0.255
Duration of Over Voltage (swell) in phase L1	3	1.0.32.37.0.255

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Magnitude of Over Voltage (swell) in phase L1	3	1.0.32.38.0.255
Duration of last voltage cut in phase L1	3	1.0.32.41.0.255
Instantaneous power factor (PF) L1	3	1.0.33.7.0.255
AveragePower factor import (|+P/+S|) L1	3	1.0.33.25.0.255
Instantaneous active power (|+P|+|-P|) L1	3	1.0.35.7.0.255
Instantaneous active import power (+A) L2	3	1.0.41.7.0.255
Active energy import (+A) L2	3	1.0.41.8.0.255
Active energy import (+A) L2 Tariff 1	3	1.0.41.8.1.255
Active energy import (+A) L2 Tariff 2	3	1.0.41.8.2.255
Active energy import (+A) L2 Tariff 3	3	1.0.41.8.3.255
Active energy import (+A) L2 Tariff 4	3	1.0.41.8.4.255
Instantaneous active export power (-P) L2	3	1.0.42.7.0.255
Active energy export (-A) L2	3	1.0.42.8.0.255
Active energy export (-A) L2 Tariff 1	3	1.0.42.8.1.255
Active energy export (-A) L2 Tariff 2	3	1.0.42.8.2.255
Active energy export (-A) L2 Tariff 3	3	1.0.42.8.3.255
Active energy export (-A) L2 Tariff 4	3	1.0.42.8.4.255
Instantaneous reactive import power (+R) L2	3	1.0.43.7.0.255
Instantaneous reactive export power (-R) L2	3	1.0.44.7.0.255
Instantaneous current L2	3	1.0.51.7.0.255
Instantaneous current L2 THD	3	1.0.51.7.124.255
Average current L2	3	1.0.51.25.0.255
Instantaneous voltage L2	3	1.0.52.7.0.255
Instantaneous voltage L2	3	1.0.52.7.124.255
Average voltage L2	3	1.0.52.25.0.255
Duration of Under Voltage (sag) in phase L2	3	1.0.52.33.0.255
Magnitude of Under Voltage (sag) in phase L2	3	1.0.52.34.0.255
Duration of Over Voltage (swell) in phaseL2	3	1.0.52.37.0.255
Magnitude of Over Voltage (swell) in phase L2	3	1.0.52.38.0.255
Duration of last voltage cut in phase L2	3	1.0.52.41.0.255
Instantaneous power factor (PF) L2	3	1.0.53.7.0.255
Average Power factor import (|+P/+S|) L2	3	1.0.53.25.0.255
Instantaneous active power (|+P|+|-P|) L2	3	1.0.55.7.0.255
Instantaneous active import power (+A) L3	3	1.0.61.7.0.255
Active energy import (+A) L3	3	1.0.61.8.0.255
Active energy import (+A) L3 Tariff 1	3	1.0.61.8.1.255
Active energy import (+A) L3 Tariff 2	3	1.0.61.8.2.255
Active energy import (+A) L3 Tariff 3	3	1.0.61.8.3.255
Active energy import (+A) L3 Tariff 4	3	1.0.61.8.4.255
Instantaneous active export power (-A) L3	3	1.0.62.7.0.255
Active energy export (-A) L3	3	1.0.62.8.0.255
Active energy export (-A) L3 Tariff 1	3	1.0.62.8.1.255
Active energy export (-A) L3 Tariff 2	3	1.0.62.8.2.255

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Active energy export (-A) L3 Tariff 3	3	1.0.62.8.3.255
Active energy export (-A) L3 Tariff 4	3	1.0.62.8.4.255
Instantaneous reactive import power (+R) L3	3	1.0.63.7.0.255
Instantaneous reactive export power (-R) L3	3	1.0.64.7.0.255
Instantaneous current L3	3	1.0.71.7.0.255
Instantaneous current L3 THD	3	1.0.71.7.124.255
Average current L3	3	1.0.71.25.0.255
Instantaneous voltage L3	3	1.0.72.7.0.255
Instantaneous voltage L3 THD	3	1.0.72.7.124.255
Average voltage L3	3	1.0.72.25.0.255
Duration of Under Voltage (sag) in phase L3	3	1.0.72.33.0.255
Magnitude of Under Voltage (sag) in phase L3	3	1.0.72.34.0.255
Duration of Over Voltage (swell) in phase L3	3	1.0.72.37.0.255
Magnitude of Over Voltage (swell) in phase L3	3	1.0.72.38.0.255
Duration of last voltage cut in phase L3	3	1.0.72.41.0.255
Instantaneous power factor (PF) L3	3	1.0.73.7.0.255
Average Power factor import (|+P/+S|) L3	3	1.0.73.25.0.255
Instantaneous active power (|+P|+|-P|) L3	3	1.0.75.7.0.255
Instantaneous current (sum over all phases)	3	1.0.90.7.0.255
Instantaneous current L0 (neutral)	3	1.0.91.7.0.255
Reactive energy Total (|+R| + |-R|)	3	1.0.128.8.0.255
Active energy import (+A) rate 1	3	1.0.128.8.1.255
Active energy import (+A) rate 2	3	1.0.128.8.2.255
Active energy import (+A) rate 3	3	1.0.128.8.3.255
Active energy import (+A) rate 4	3	1.0.128.8.4.255
Maximum Demand Register 1 -Active energy import (+A)	4	1.0.1.6.0.255
Maximum Demand Register 2 -Active energy import (+A) - rate 1	4	1.0.1.6.1.255
Maximum Demand Register 3 -Active energy import (+A) - rate 2	4	1.0.1.6.2.255
Maximum Demand Register 4 -Active energy import (+A) - rate 3	4	1.0.1.6.3.255
Maximum Demand Register 5 -Active energy import (+A) - rate 4	4	1.0.1.6.4.255
Maximum Demand Register 6 -Active energy export (−A)	4	1.0.2.6.0.255
Maximum Demand Register 7 -Active energy export (−A) - rate 1	4	1.0.2.6.1.255
Maximum Demand Register 8 -Active energy export (−A) - rate 2	4	1.0.2.6.2.255
Maximum Demand Register 9 -Active energy export (−A) - rate 3	4	1.0.2.6.3.255
Maximum Demand Register 10 -Active energy export (−A) -rate 4	4	1.0.2.6.4.255
Demand Register 1 -Active energy import (+A)	5	1.0.1.4.0.255
Demand Register 2 -Active energy export (−A)	5	1.0.2.4.0.255

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Register Activation- Energy	6	0.0.14.0.1.255
Register Activation- Maximum Demand	6	0.0.14.0.2.255
General Display readout List-Auto Scroll	7	0.0.21.0.1.255
Alternative Display readout List-Manual Scroll	7	0.0.21.0.2.255
Billing profile monthly	7	0.0.98.1.0.255
Billing profile Daily	7	0.0.98.2.0.255
Received signal strength profile	7	0.0.99.1.0.255
Standard event log	7	0.0.99.98.0.255
Fraud detection event log	7	0.0.99.98.1.255
Power quality event log	7	0.0.99.98.4.255
Communication log	7	0.0.99.98.5.255
Load profile 1 (hourly)	7	1.0.99.1.0.255
Load profile 2 (daily)	7	1.0.99.2.0.255
Power quality profile	7	1.0.99.14.0.255
Power failure event log	7	1.0.99.97.0.255
Clock	8	0.0.1.0.0.255
MDI Reset (Predefined Script)/ End of Billing Period	9	0.0.10.0.1.255
Active Tariffication Script Table	9	0.0.10.0.100.255
Predefined Scripts -Image activation	9	0.0.10.0.107.255
Push script table	9	0.0.10.0.108.255
FOTA script table	9	0.2.10.0.1.255
Active Special Days Table	11	0.0.11.0.0.255
Current association	15	0.0.40.0.0.255
SAP assignment of current physical device	17	0.0.41.0.0.255
Image transfer	18	0.0.44.0.0.255
IEC Local port setup	19	0.0.20.0.0.255
Activity Calendar	20	0.0.13.0.0.255
Alarm Monitor 1	21	0.0.16.1.0.255
Alarm Monitor 2	21	0.0.16.1.1.255
End of billing period 1 (Monthly)	22	0.0.15.0.0.255
Image Transfer Activation Scheduler	22	0.0.15.0.2.255
End of billing period 2 (Daily)	22	0.0.15.1.0.255
Push action scheduler – Interval_01	22	0.1.15.0.4.255
Push action scheduler - Interval_02	22	0.2.15.0.4.255
Push action scheduler - Interval_03	22	0.3.15.0.4.255
IEC HDLC setup -HDLC Optical port	23	0.0.22.0.0.255
Modem Configuration	27	0.0.2.0.0.255
Auto Answer	28	0.0.2.2.0.255
Auto connect	29	0.0.2.1.0.255
Push setup -On Connectivity	40	0.0.25.9.0.255
Push Setup interval-01	40	0.1.25.9.0.255
Push Setup-interval-02	40	0.2.25.9.0.255
Push setup - Interval_03	40	0.3.25.9.0.255

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

Push setup -On Alarm	40	0.4.25.9.0.255
Push setup -On Installation	40	0.7.25.9.0.255
TCP-UDP setup	41	0.0.25.0.0.255
IPv4 setup	42	0.0.25.1.0.255
PPP setup	44	0.0.25.3.0.255
GPRS modem setup	45	0.0.25.4.0.255
GSM Diagnostic	47	0.0.25.6.0.255
IPv6 setup	48	0.0.25.7.0.255
Security Setup – Current client	64	0.0.43.0.0.255
Security Setup – Public client	64	0.0.43.0.1.255
Security Setup (Reading Client)	64	0.0.43.0.2.255
Security setup - management Client	64	0.0.43.0.3.255
Security setup - pre-established Client	64	0.0.43.0.6.255

Annexure III Default Tariff Table

The default tariff table will be initialized during the manufacture process. It can be changed according to customer's order.

Season Table:

Season Profile Name	Start Date	Week Profile
S01	January1st	W0

Week Table:

Week Profile Name	Mon	Tues.	Wed.	Thur.	Fri.	Sat.	Sun.
W0	0	0	0	0	0	0	0

Special Day Table:

Holiday index	Month	Day	Day ID

Day Table:

Day ID	Time duration(Hour : Minute)	Energy Tariff (T)

KWHIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ

0	Daily from 00.00 till 6.00	T1
0	Daily from 6.00 till 12.00	T2
0	Daily from 12.00 till 18.00	T3
0	Daily from 18.00 till 24.00	T4

KHWIQ CONFIDENTIAL

Copyright KWHIQ – Reproduction and communication of this document is strictly prohibited unless specifically authorized in writing by KWHIQ